

5. Muffler


A: REMOVAL

CAUTION:


Be careful not to burn yourself, because the exhaust pipe becomes extremely hot after running.

- 1) Set the vehicle on a lift.
- 2) Lift up the vehicle.
- 3) Separate the muffler from rear exhaust pipe.

- LH side

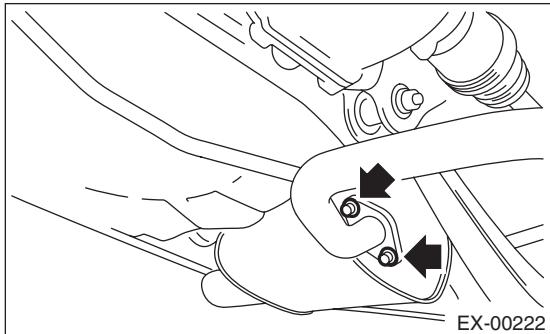


- RH side

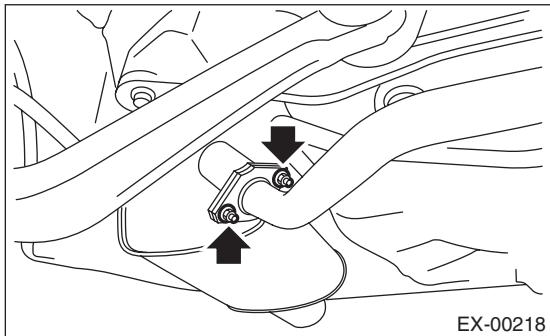


- 4) Apply a coat of spray type lubricant to the mating area of cushion rubber.

- LH side

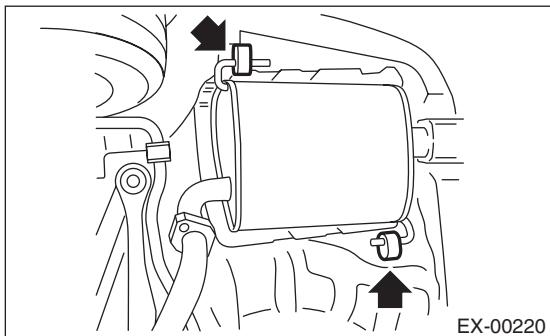

- RH side

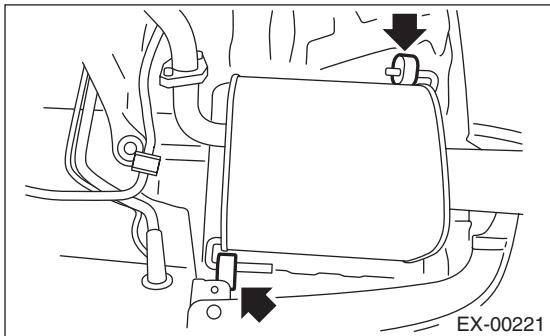

- 5) Remove the front and rear cushion rubber, and then remove the muffler.

B: INSTALLATION

Install in the reverse order of removal.


NOTE:

- Use a new gasket and self-locking nut.
- After assembling, degrease the lubricant which was applied to the cushion rubber while removing/installing.


Tightening torque:

48 N·m (4.9 kgf·m, 35.4 ft-lb)

- LH side

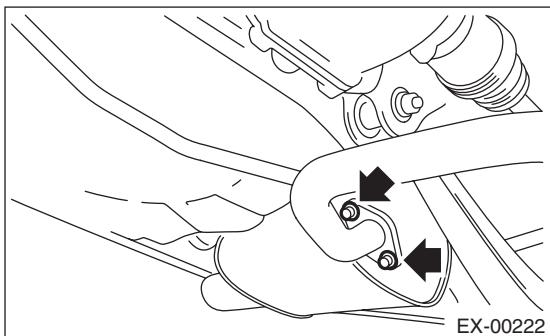

- RH side

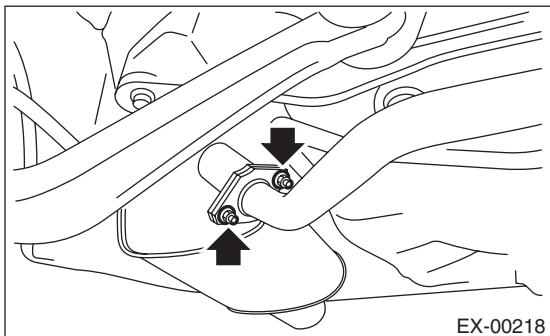

C: INSPECTION

- 1) Check the connections and welds for exhaust leaks.
- 2) Make sure there are no holes or rusting.
- 3) Check the cushion rubber for wear or crack.

COOLING

CO(H₄SO)

| | Page |
|--|------|
| 1. General Description | 2 |
| 2. Radiator Fan System | 7 |
| 3. Engine Coolant | 12 |
| 4. Water Pump | 14 |
| 5. Thermostat | 17 |
| 6. Radiator | 19 |
| 7. Radiator Cap | 23 |
| 8. Radiator Main Fan and Fan Motor | 24 |
| 9. Radiator Sub Fan and Fan Motor | 26 |
| 10. Reservoir Tank | 28 |
| 11. Engine Cooling System Trouble in General | 29 |