



## 10. Mass Air Flow and Intake Air Temperature Sensor

### A: REMOVAL

- 1) Disconnect the ground cable from the battery.

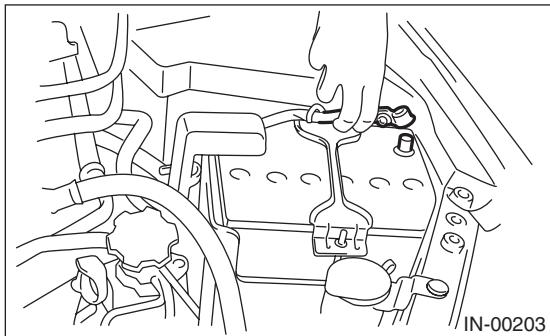

- 2) Disconnect the connectors from the mass air flow and intake air temperature sensor.
- 3) Remove the mass air flow and intake air temperature sensor.

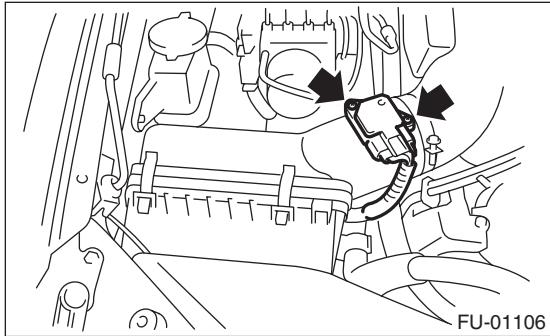

### B: INSTALLATION

Install in the reverse order of removal.

***Tightening torque:***

**1.0 N·m (0.10 kgf·m, 0.74 ft-lb)**