


## 17. Engine Control Module (ECM)

### A: REMOVAL

- 1) Disconnect the ground cable from the battery.

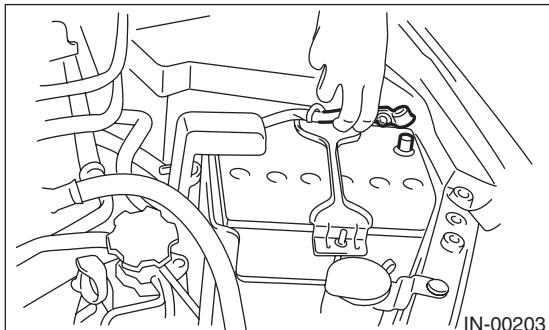


- 2) Remove the lower inner trim of passenger's side.

<Ref. to EI-58, REMOVAL, Lower Inner Trim.>


- 3) Detach the floor mat of passenger's seat.

- 4) Remove the protect cover.

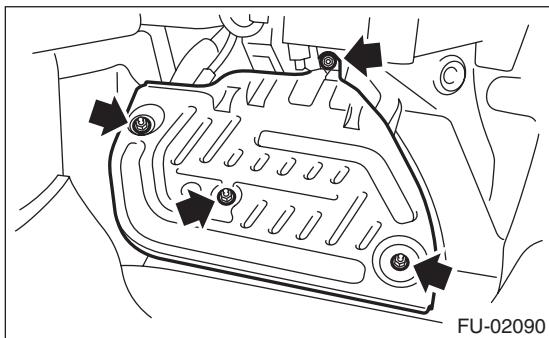

- 5) Remove the bolts and nuts which hold the ECM to the bracket.

- 6) Remove the clip (A) from bracket.

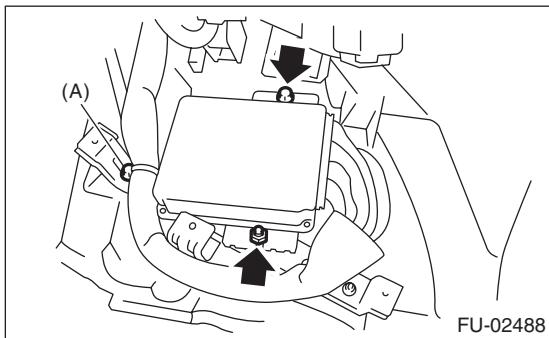

- 7) Disconnect the ECM connectors, and take out the ECM.

### B: INSTALLATION

Install in the reverse order of removal.

**NOTE:**

- When replacing the ECM, be careful not to use the ECM for wrong specifications to avoid any damage to fuel injection system.
- When replacing the ECM, be careful not to damage the harnesses and connectors.

**Tightening torque:**

7.5 N·m (0.76 kgf·m, 5.5 ft-lb)