


### 3. Air Cleaner Case


#### A: REMOVAL

1) Disconnect the ground cable from the battery.

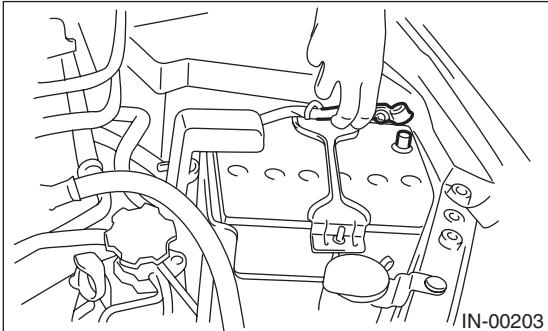


2) Remove the air intake duct. <Ref. to IN(H4SO)-8, REMOVAL, Air Intake Duct.>

3) Disconnect the connector from mass air flow and intake air temperature sensor.

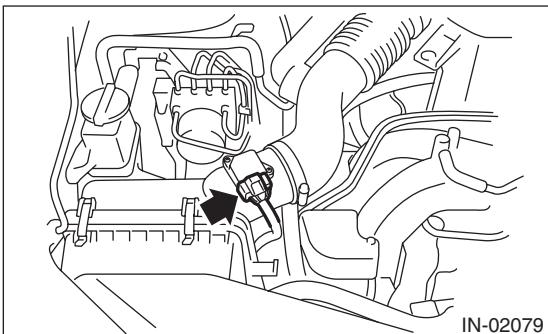


4) Loosen the clamps (A) which connect the air cleaner case and the intake boot.


5) Remove the clip (B) securing the upper side of air cleaner case.

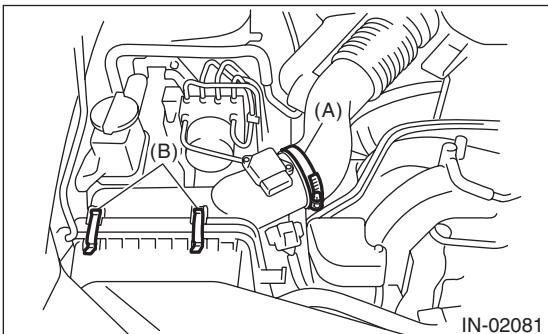

6) Remove the air cleaner case (rear) and air cleaner element.

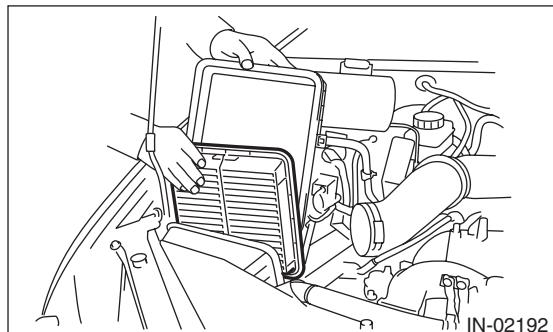

7) Remove the bolts (A) and nut (B) which secure the air cleaner case to body.

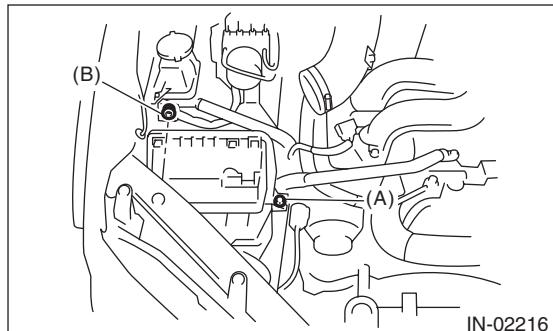

8) Remove the air cleaner case (front).

# Air Cleaner Case

## INTAKE (INDUCTION)


### B: INSTALLATION

Install in the reverse order of removal.

#### ***Tightening torque:***


**Bolt (A): 6.0 N·m (0.6 kgf-m, 4.4 ft-lb)**

**Nut (B): 7.5 N·m (0.76 kgf-m, 5.5 ft-lb)**

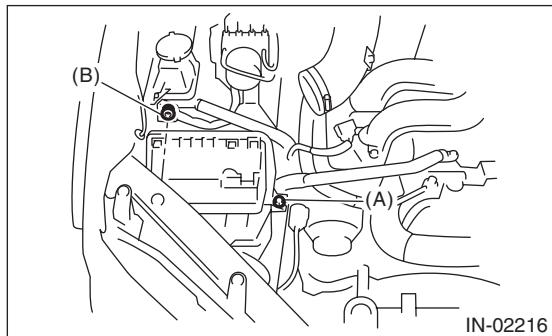

#### NOTE:

Fasten with a clip after inserting the lower tab of case.

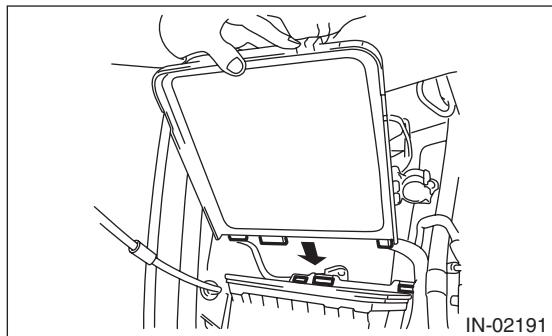

### C: INSPECTION

Check for cracks or loose connections.