

7. Fuel Pressure

A: INSPECTION

CAUTION:

Before removing the fuel pressure gauge, release the fuel pressure.


NOTE:

Check or replace the fuel pump and fuel delivery line if the fuel pressure is out of the standard.

- 1) Release the fuel pressure.

<Ref. to FU(H4SO)-39, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>

- 2) Disconnect the fuel delivery hose from the fuel damper, and connect the fuel pressure gauge.

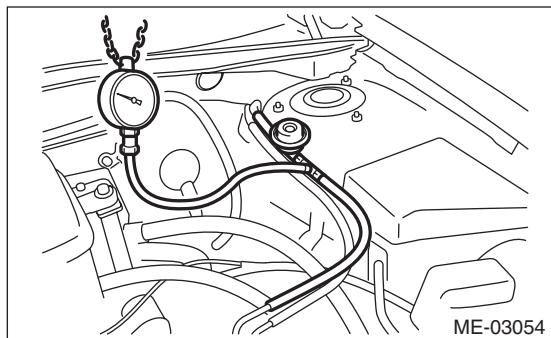

- 3) Install the fuse of fuel pump to main fuse box.
- 4) Start the engine.
- 5) Measure the fuel pressure after warming up the engine.

Fuel pressure:

Standard:

339.5—360.5 kPa (3.5—3.7 kg/cm², 49—52 psi)

NOTE:

The fuel pressure gauge registers 10 to 20 kPa (0.1 to 0.2 kg/cm², 1 to 3 psi) higher than standard values during high-altitude operations.