


12. Shut Valve


A: REMOVAL

- 1) Remove the fuel filler pipe. <Ref. to FU(H4DOTC)-57, REMOVAL, Fuel Filler Pipe. >
- 2) Disconnect the evaporation hose from the shut valve.

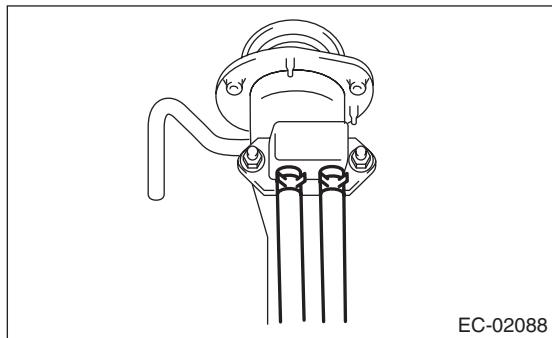

EC-02088

- 3) Remove the shut valve from the fuel filler pipe.

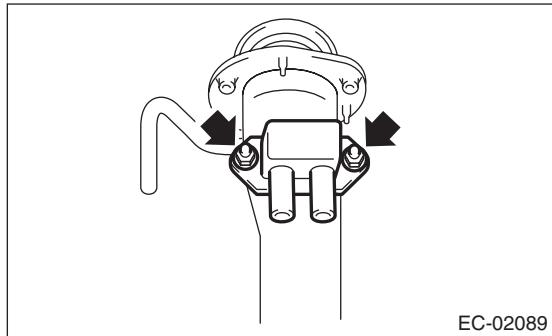


EC-02089

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

4.5 N·m (0.46 kgf·m, 3.3 ft-lb)

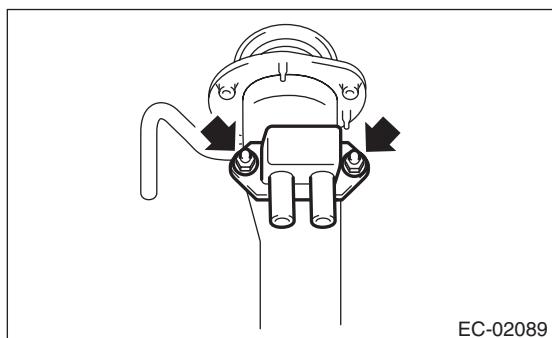

EC-02089

C: INSPECTION

Make sure the hoses are not cracked or loose.