

14. PCV Hose Assembly


A: REMOVAL

CAUTION:

Do not remove unless the PCV hose, diagnostics connector and PCV valve are damaged.

- 1) Remove the intake manifold.<Ref. to FU(H4DOTC)-13, REMOVAL, Intake Manifold.>
- 2) Fit the depression in the ST with the protrusion on the clamp to unlock.
- 3) Remove the PCV hose assembly.

ST 18353AA000 CLAMP PLIERS

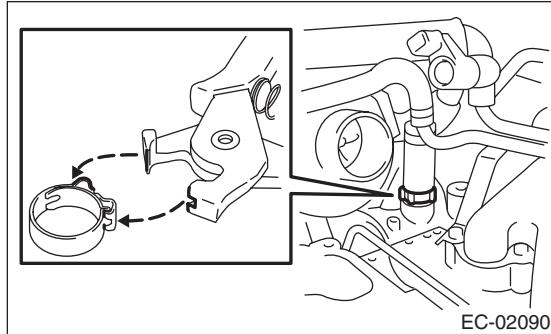


B: INSTALLATION

NOTE:

Use a new clamp.

- 1) Install the PCV hose assembly, then lock by fitting the ST on the clamp protrusion.

ST 18353AA000 CLAMP PLIERS

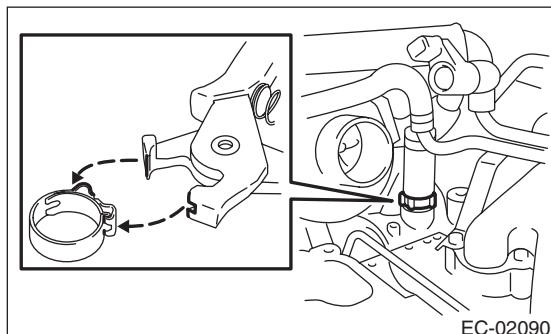

- 2) Install the intake manifold.<Ref. to FU(H4DOTC)-16, INSTALLATION, Intake Manifold.>