


Secondary Air Pump

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


15. Secondary Air Pump

A: REMOVAL


- 1) Remove the collector cover.
- 2) Disconnect the ground cable from the battery.

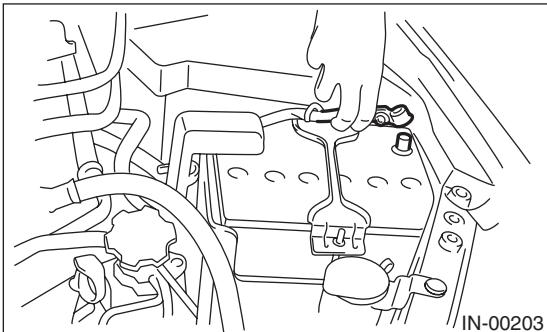

- 3) Disconnect the connector (A) from secondary air pump, and remove the harness.
- 4) Disconnect the hose (B) from secondary air pump.

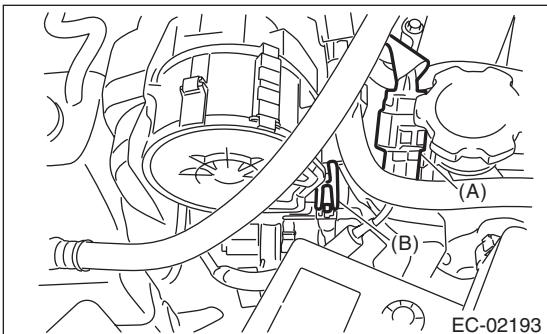

5) Remove the bolt (C) which secures the secondary air pump to the body.

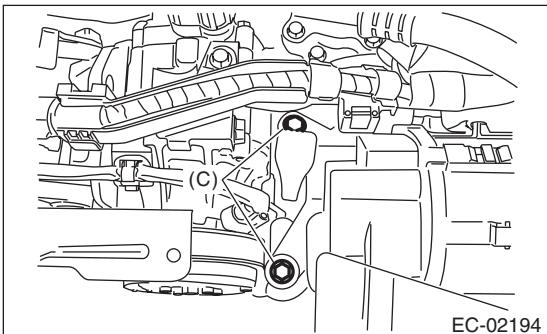


B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

19 N·m (1.94 kgf·m, 13.7 ft-lb)

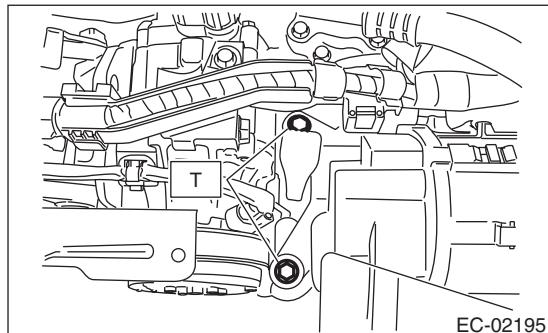

C: INSPECTION

Make sure the hoses are not cracked or loose.