

8. Fuel Sub Level Sensor

A: REMOVAL

For removal procedure, refer to “FU(H4DOTC)” section. <Ref. to FU(H4DOTC)-63, REMOVAL, Fuel Sub Level Sensor.>

B: INSTALLATION

For installation procedure, refer to “FU(F4DOTC)” section. <Ref. to FU(H4DOTC)-64, INSTALLATION, Fuel Sub Level Sensor.>