

EXHAUST


5. Rear Exhaust Pipe

A: REMOVAL

CAUTION:

Be careful not to burn yourself, because the exhaust pipe becomes extremely hot after running.


- 1) Set the vehicle on a lift.
- 2) Lift up the vehicle.
- 3) Separate the rear exhaust pipe from center exhaust pipe.

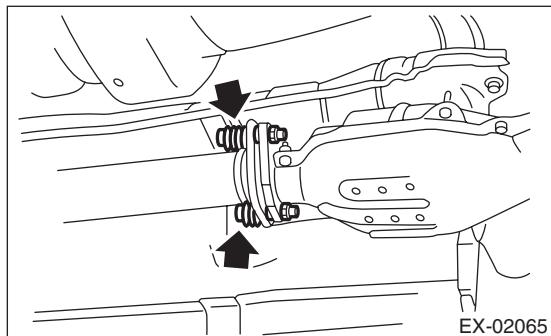

- 4) Separate the rear exhaust pipe from both mufflers.


CAUTION:

Be careful not to pull down the rear exhaust pipe.

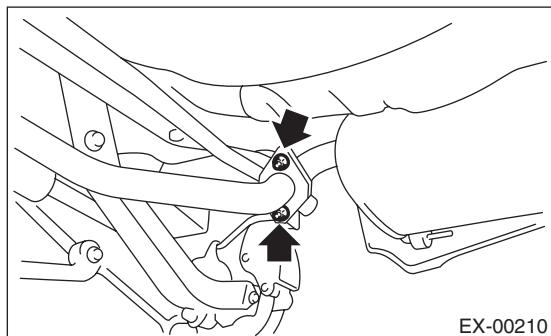

- 5) Apply a coat of spray type lubricant to the mating area of cushion rubber.

- 6) Remove the rear exhaust pipe bracket from cushion rubber.

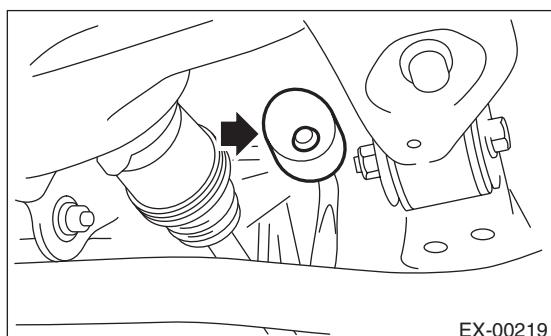

- 7) Remove the rear exhaust pipe.


B: INSTALLATION

1) Apply a coat of spray type lubricant to the mating area of cushion rubber.

2) Install the rear exhaust pipe bracket to cushion rubber.

NOTE:

After assembling, degrease the lubricant which was applied to the cushion rubber while removing/installing.

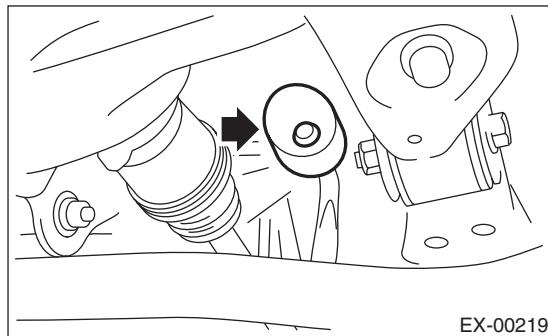


- 3) Install the rear exhaust pipe to both mufflers.

NOTE:

Use a new gasket and self-locking nut.

Tightening torque:

48 N·m (4.9 kgf·m, 35.4 ft·lb)

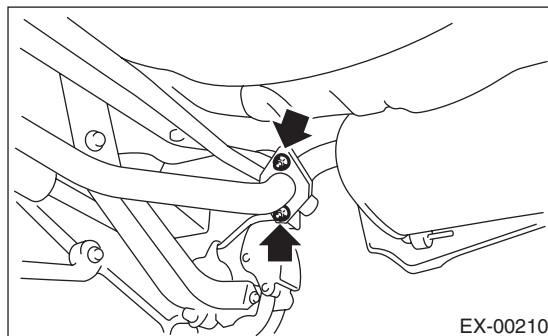


- 4) Install the rear exhaust pipe to center exhaust pipe.

NOTE:

Use a new gasket.

Tightening torque:

18 N·m (1.8 kgf·m, 13.3 ft·lb)

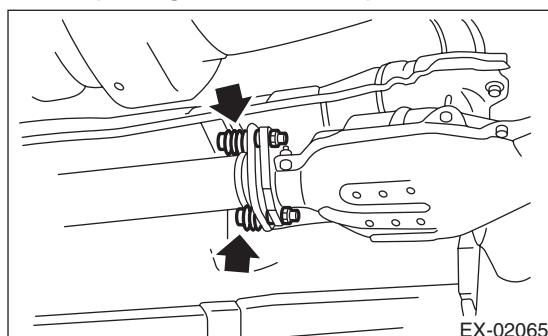

- 5) Lower the vehicle.

C: INSPECTION

- 1) Check the connections and welds for exhaust leaks.
- 2) Make sure there are no holes or rusting.
- 3) Check the cushion rubber for wear or crack.