


### 6. Muffler

#### A: REMOVAL

**CAUTION:**

Be careful not to burn yourself, because the exhaust pipe becomes extremely hot after running.

- 1) Set the vehicle on a lift.
- 2) Lift up the vehicle.
- 3) Separate the muffler (RH) from the rear exhaust pipe.

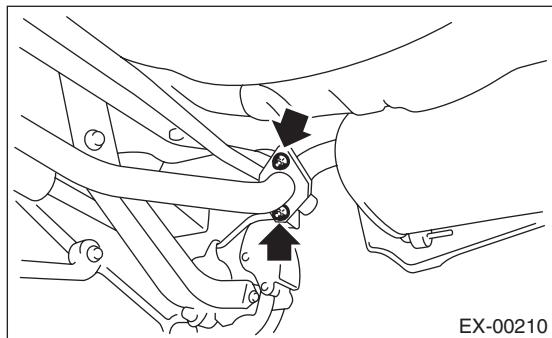


EX-00210

- 4) Apply a coat of spray type lubricant to the mating area of cushion rubber.
- 5) Remove the cushion rubber, and remove the muffler.

**CAUTION:**

Be careful not to drop the muffler during removal.

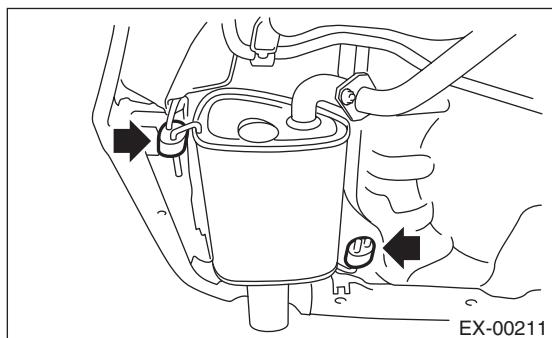

EX-00211

- 6) Perform the same procedures for the muffler (LH).

#### B: INSTALLATION


Install in the reverse order of removal.

**NOTE:**

- Use a new gasket and self-locking nut.
- After assembling, degrease the lubricant which was applied to the cushion rubber while removing/installing.

**Tightening torque:**

48 N·m (4.9 kgf·m, 35.4 ft·lb)

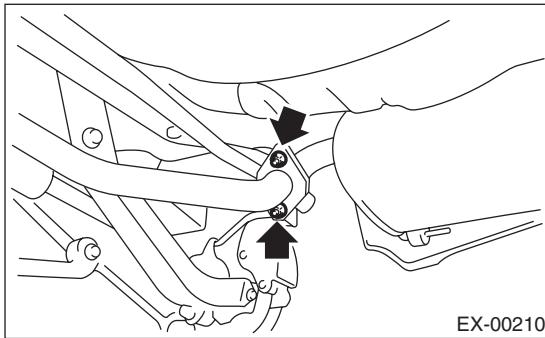

EX-00210

#### C: INSPECTION

- 1) Check the connections and welds for exhaust leaks.
- 2) Make sure there are no holes or rusting.
- 3) Check the cushion rubber for wear or crack.

# COOLING

# CO(H4DOTC)

---

	Page
1. General Description .....	2
2. Radiator Fan System .....	8
3. Engine Coolant .....	13
4. Water Pump .....	15
5. Thermostat .....	17
6. Radiator .....	19
7. Radiator Cap .....	23
8. Radiator Main Fan and Fan Motor .....	24
9. Radiator Sub Fan and Fan Motor .....	27
10. Reservoir Tank .....	30
11. Coolant Filler Tank .....	31
12. Engine Cooling System Trouble in General .....	32