


## 11. Fuel Injector


### A: REMOVAL

#### 1. RH SIDE


- 1) Release the fuel pressure. <Ref. to FU(H4DOTC)-49, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>
- 2) Remove the collector cover.
- 3) Disconnect the ground cable from battery.

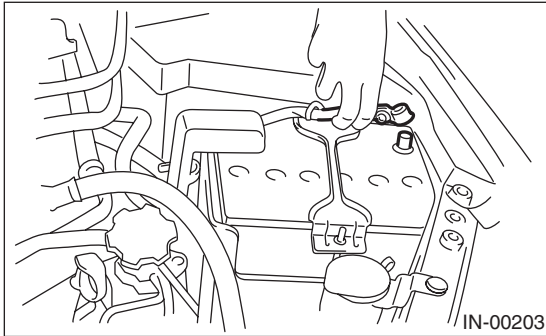


- 4) Open the fuel filler flap lid, and remove the fuel filler cap.
- 5) Remove the intake manifold. <Ref. to FU(H4DOTC)-13, REMOVAL, Intake Manifold.>
- 6) Remove the fuel pipe protector RH from the intake manifold.

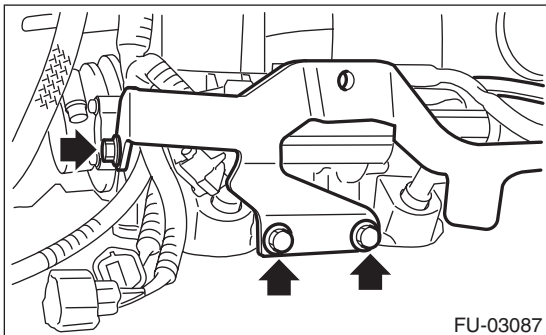

- 7) Disconnect the connector from fuel injector.
- 8) Remove the bolt which holds fuel injector pipe onto intake manifold.

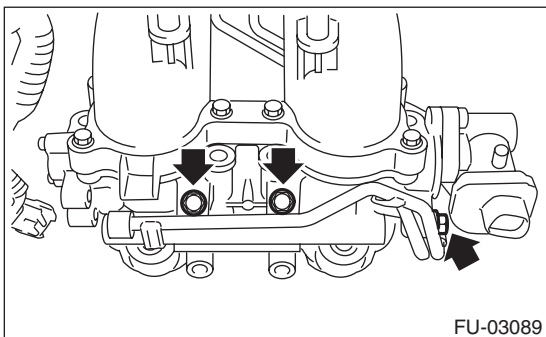


- 9) Remove the fuel injector.

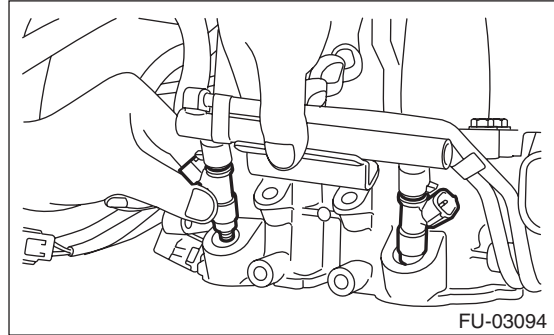


#### 2. LH SIDE

- 1) Release the fuel pressure. <Ref. to FU(H4DOTC)-49, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>
- 2) Remove the collector cover.
- 3) Disconnect the ground cable from battery.

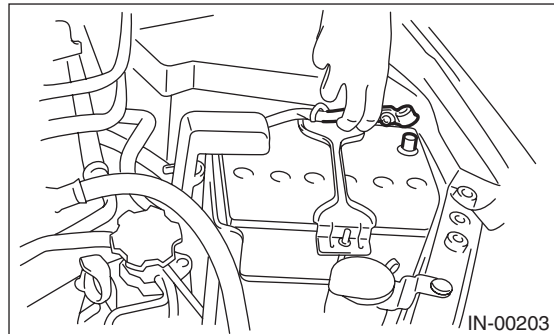

- 4) Open the fuel filler flap lid, and remove the fuel filler cap.
- 5) Remove the intake manifold. <Ref. to FU(H4DOTC)-13, REMOVAL, Intake Manifold.>
- 6) Remove the engine ground terminal from the fuel pipe protector LH and remove the fuel pipe protector LH from the intake manifold.


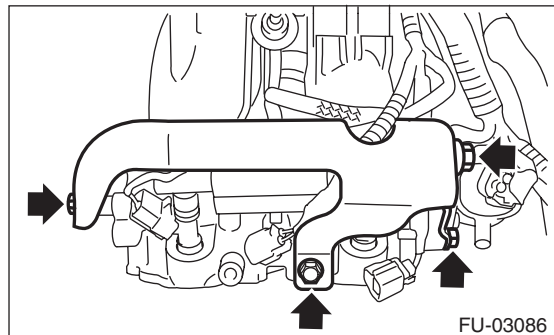


- 7) Disconnect the connector from fuel injector.


# Fuel Injector

## FUEL INJECTION (FUEL SYSTEMS)

8) Remove the bolt which holds fuel injector pipe onto intake manifold.

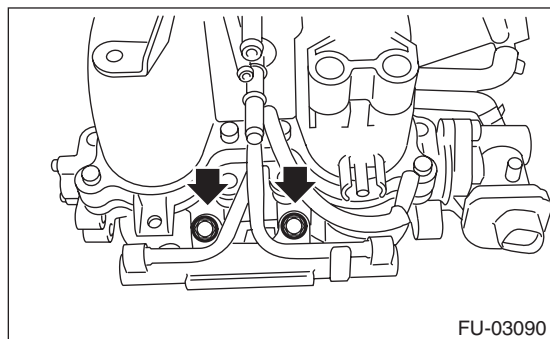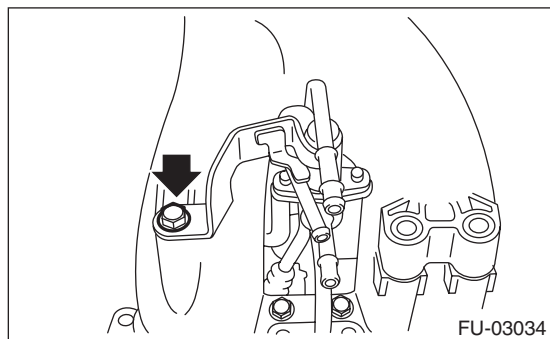

9) Remove the fuel injector.

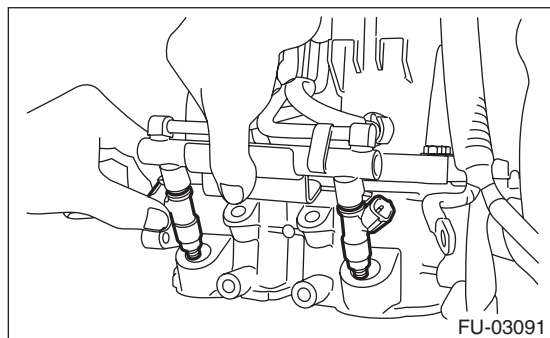

## B: INSTALLATION

### 1. RH SIDE


Install in the reverse order of removal.

NOTE:

Use new O-rings.


**Tightening torque:**

**19 N·m (1.9 kgf-m, 14 ft-lb)**

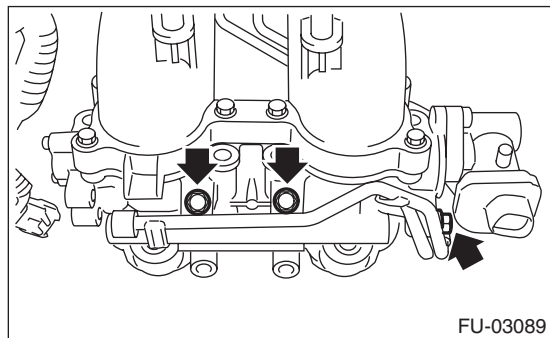

**Tightening torque:**

**19 N·m (1.9 kgf-m, 14 ft-lb)**

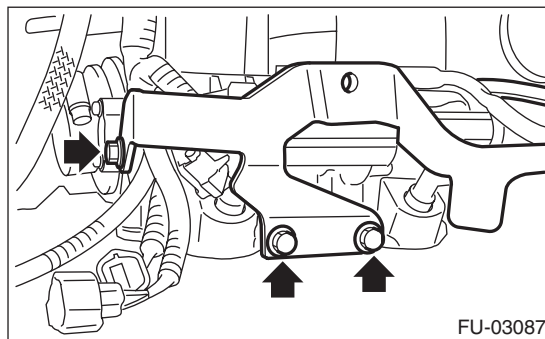

### 2. LH SIDE


Install in the reverse order of removal.

NOTE:

Use new O-rings.


**Tightening torque:**

**19 N·m (1.9 kgf-m, 14 ft-lb)**

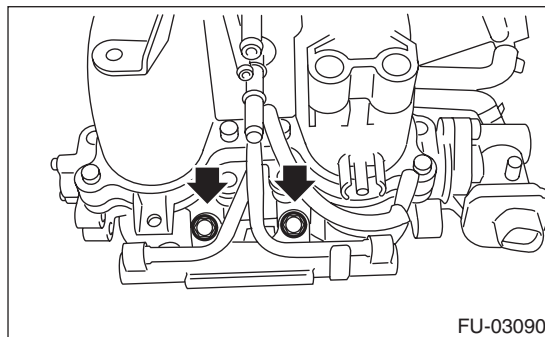

**Tightening torque:**

**6.4 N·m (0.65 kgf-m, 4.7 ft-lb)**

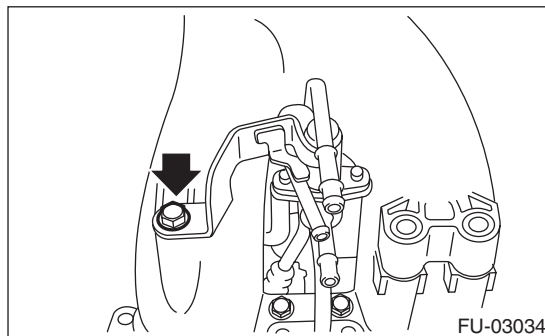

**Tightening torque:**

**19 N·m (1.9 kgf-m, 14 ft-lb)**

