

14. Tumble Generator Valve Position Sensor

A: SPECIFICATION

The tumble generator valve assembly cannot be disassembled.

Refer to "Tumble Generator Valve Assembly" for removal and installation procedure. <Ref. to FU(H4DOTC)-35, REMOVAL, Tumble Generator Valve Assembly.> <Ref. to FU(H4DOTC)-35, INSTALLATION, Tumble Generator Valve Assembly.>