


20. Engine Control Module (ECM)

A: REMOVAL


- 1) Disconnect the ground cable from battery.

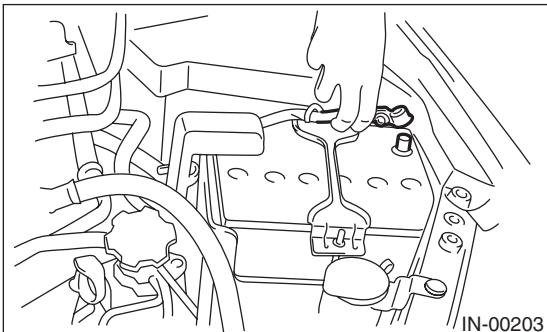

- 2) Remove the lower inner trim of passenger's side. <Ref. to EI-58, REMOVAL, Lower Inner Trim.>


- 3) Detach the floor mat of passenger's seat.

- 4) Remove the protect cover.

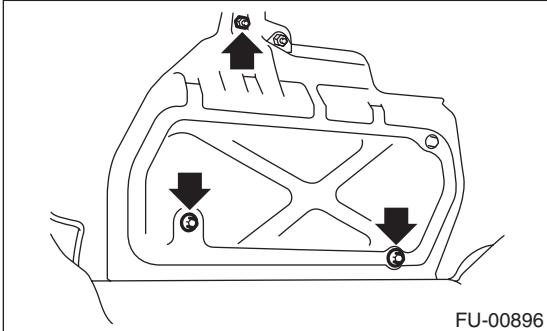

- 5) Remove the bolts and nuts which hold the ECM to the bracket.

- 6) Remove the clip (A) from bracket.

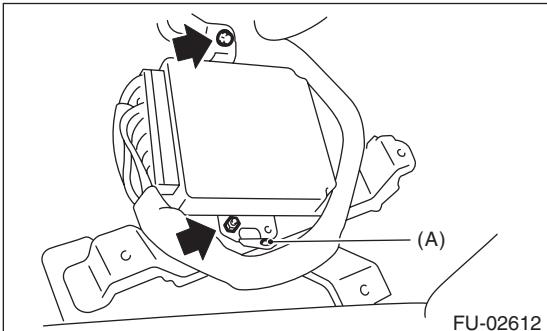

- 7) Disconnect the ECM connectors, and take out the ECM.

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

When replacing the ECM, be careful not to use the wrong spec. ECM to avoid any damage on the fuel injection system.

Tightening torque:

7.5 N·m (0.8 kgf·m, 5.5 ft-lb)