


22. Fuel Pump Relay

A: REMOVAL


- 1) Disconnect the ground cable from battery.

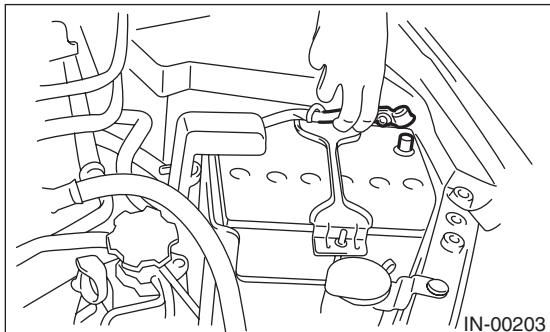


- 2) Remove the glove box. <Ref. to EI-50, REMOV-

AL, Glove Box.>

- 3) Remove the harness cover (A).

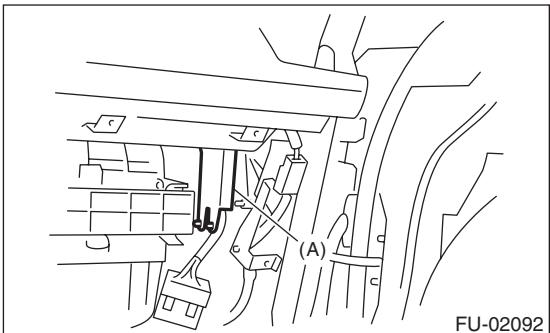

- 4) Disconnect the connector from fuel pump relay.

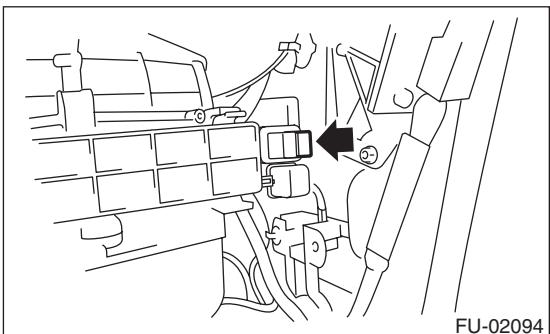

B: INSTALLATION

Install in the reverse order of removal.