

29. Fuel Level Sensor

A: REMOVAL

WARNING:

Place "NO OPEN FLAMES" signs near the working area.


CAUTION:

Be careful not to spill fuel.

NOTE:

The fuel level sensor is built in fuel pump assembly.

- 1) Remove the fuel pump assembly. <Ref. to FU(H4DOTC)-60, REMOVAL, Fuel Pump.>
- 2) Disconnect the connector from fuel pump bracket.
- 3) Remove the fuel temperature sensor.
- 4) Remove the fuel level sensor.

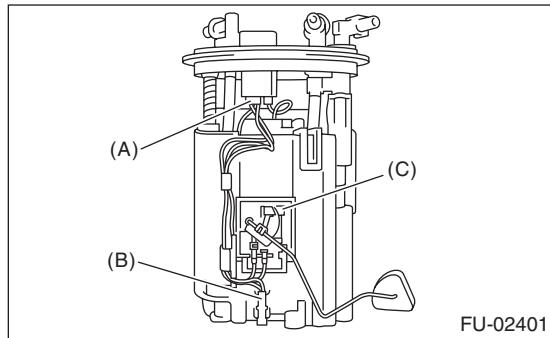

- (A) Connector
- (B) Fuel temperature sensor
- (C) Fuel level sensor

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Use a new gasket.

Tightening torque:

4.4 N·m (0.45 kgf·m, 3.2 ft-lb)