



## 2. Air Cleaner Element

### A: REMOVAL

- 1) Remove the collector cover.
- 2) Disconnect the ground cable from the battery.

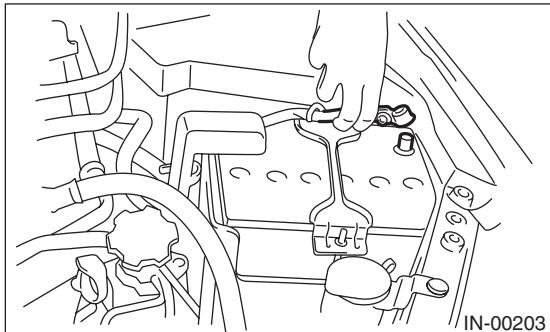

- 3) Disconnect the connector (A) from the mass air flow sensor.
- 4) Loosen the clamp (B) which connects the air intake boot and intake duct.
- 5) Remove the clip (C) from the air cleaner case.

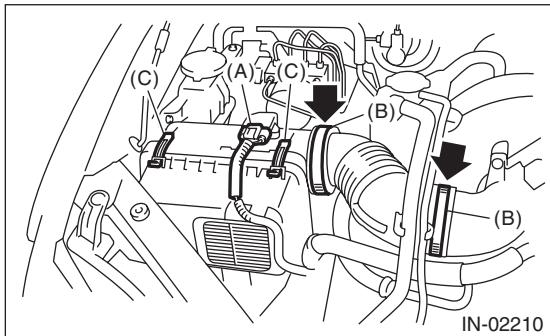

- 6) Remove the air cleaner case (rear) and air intake boot.
- 7) Remove the air cleaner element.

### B: INSTALLATION


Install in the reverse order of removal.

#### CAUTION:

Be sure to use SUBARU genuine air cleaner element depending on the engine type when replacing the air cleaner elements. Otherwise engine performance may be damaged.

#### NOTE:

When installing the air cleaner case (rear), align the protrusion of the air cleaner case (rear) to the hole on the air cleaner case (front) to install.

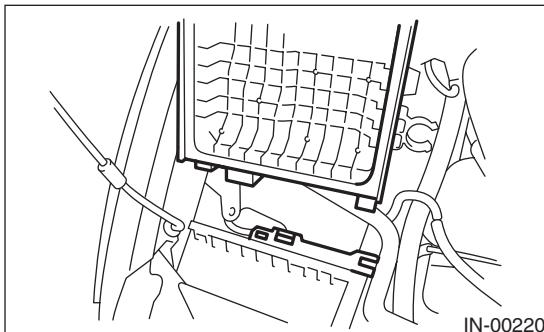

### C: INSPECTION

Replace if excessively damaged or dirty.