


## 4. Air Intake Duct

### A: REMOVAL

Remove the clip which installs the air intake duct on the front side of body.

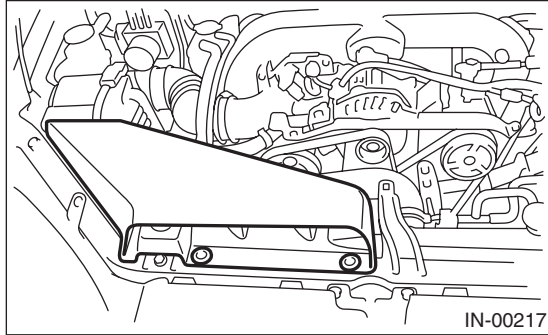

### B: INSTALLATION

Install in the reverse order of removal.

### C: INSPECTION

- 1) Check for cracks or loose connections.
- 2) Inspect that no foreign objects in the air intake duct.