


9. Air By-pass Valve

A: REMOVAL

- 1) Remove the collector cover.
- 2) Disconnect the air by-pass hose (A) from the air by-pass valve.
- 3) Remove the air by-pass valve (B) from the inter-cooler.

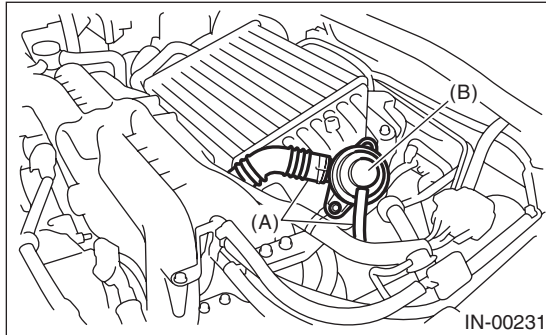


B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

6.5 N·m (0.66 kgf-m, 4.8 ft-lb)

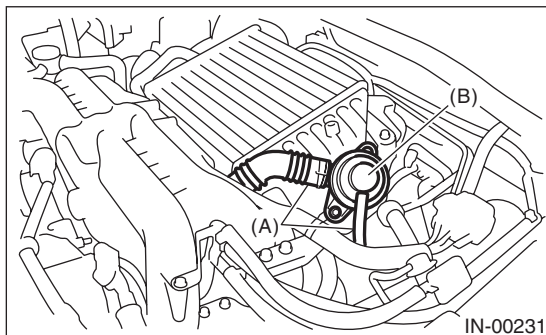

- (A) Air by-pass hose
- (B) Air by-pass valve

Air By-pass Valve

INTAKE (INDUCTION)

MECHANICAL

ME(H4DOTC)

	Page
1. General Description	2
2. Compression	20
3. Idle Speed	21
4. Ignition Timing	22
5. Intake Manifold Vacuum	23
6. Engine Oil Pressure	24
7. Fuel Pressure	25
8. Valve Clearance	26
9. Engine Assembly	29
10. Engine Mounting	35
11. Preparation for Overhaul	36
12. V-belt	37
13. Crank Pulley	40
14. Timing Belt Cover	42
15. Timing Belt	43
16. Cam Sprocket	51
17. Crank Sprocket	52
18. Camshaft	53
19. Cylinder Head	58
20. Cylinder Block	65
21. Intake and Exhaust Valve	83
22. Piston	84
23. Connecting Rod	85
24. Crankshaft	86
25. Engine Trouble in General	87
26. Engine Noise	93