

## 10. Engine Mounting

### A: REMOVAL

- 1) Remove the engine unit. <Ref. to ME(H4DOTC)-29, REMOVAL, Engine Assembly.>
- 2) Remove the engine mounting from engine assembly.

### B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Make sure the engine mounting cover of the RH side is securely installed.

*Tightening torque:*

*Engine mounting:*

**35 N·m (3.6 kgf·m, 25.8 ft-lb)**

### C: INSPECTION

Make sure that no crack or other damages do not exist.