

1. General Description

A: SPECIFICATION

Specifications for the turbo model are included in the SC(H4SO) section. <Ref. to SC(H4SO)-2, General Description.>

ENGINE (DIAGNOSTICS)

EN(H4DOTC)(diag)

	Page
1. Basic Diagnostic Procedure	2
2. Check List for Interview	3
3. General Description	5
4. Electrical Component Location	8
5. Engine Control Module (ECM) I/O Signal	18
6. Engine Condition Data	28
7. Data Link Connector	29
8. General Scan Tool	30
9. Subaru Select Monitor	35
10. Read Diagnostic Trouble Code (DTC)	44
11. Inspection Mode	45
12. Drive Cycle	50
13. Clear Memory Mode	56
14. Compulsory Valve Operation Check Mode	57
15. System Operation Check Mode	58
16. Malfunction Indicator Light	60
17. Diagnostics for Engine Starting Failure	69
18. List of Diagnostic Trouble Code (DTC)	81
19. Diagnostic Procedure with Diagnostic Trouble Code (DTC)	89
20. Diagnostic Procedure without Diagnostic Trouble Code (DTC)	376
21. General Diagnostic Table	380