


10. Reservoir Tank

A: REMOVAL

- 1) Disconnect the over flow hose.
- 2) Remove the bolts which hold the reservoir tank to the fan shroud, then remove the reservoir tank.

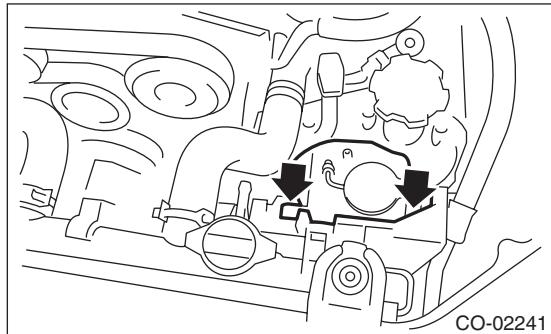

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

$6.2 \text{ N}\cdot\text{m}$ (0.63 kgf-m, 4.6 ft-lb)

C: INSPECTION

Make sure the engine coolant level is between "FULL" and "LOW".