


Canister

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


4. Canister

A: REMOVAL


- 1) Set the vehicle on a lift.
- 2) Disconnect the ground cable from battery.

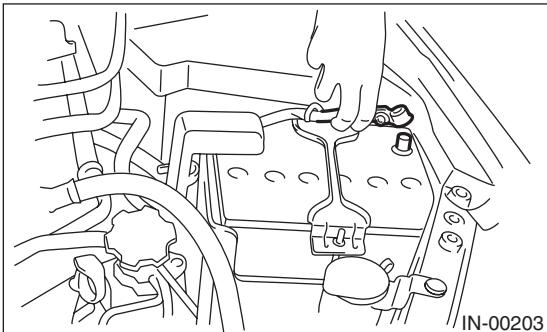

- 3) Lift-up the vehicle.
- 4) Remove the rear wheel LH.
- 5) Remove the rear mud guard LH.
- 6) Disconnect quick connector (A).
- 7) Disconnect the drain valve connector (B).
- 8) Remove clip (C).

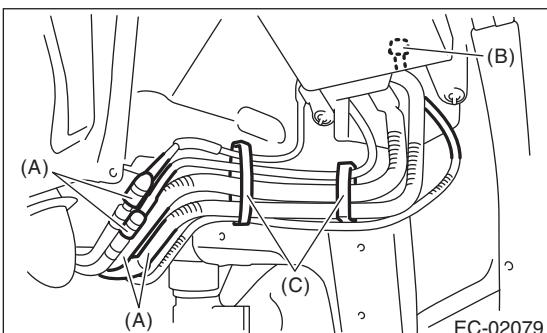

- 9) Remove the canister from body.

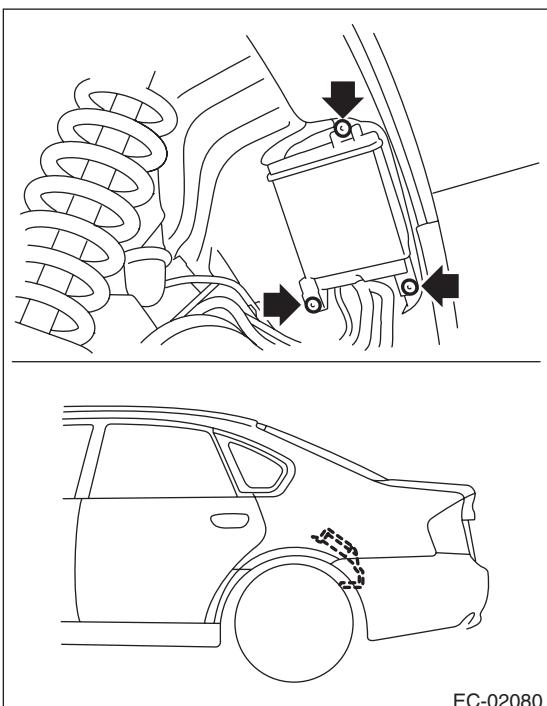

B: INSTALLATION


Install in the reverse order of removal.

NOTE:

Check that there is no damage or dust on the quick connector. If necessary, clean the seal surface of the pipe.

Tightening torque:

$8.0 \text{ N}\cdot\text{m} (0.82 \text{ kgf}\cdot\text{m}, 5.9 \text{ ft}\cdot\text{lb})$

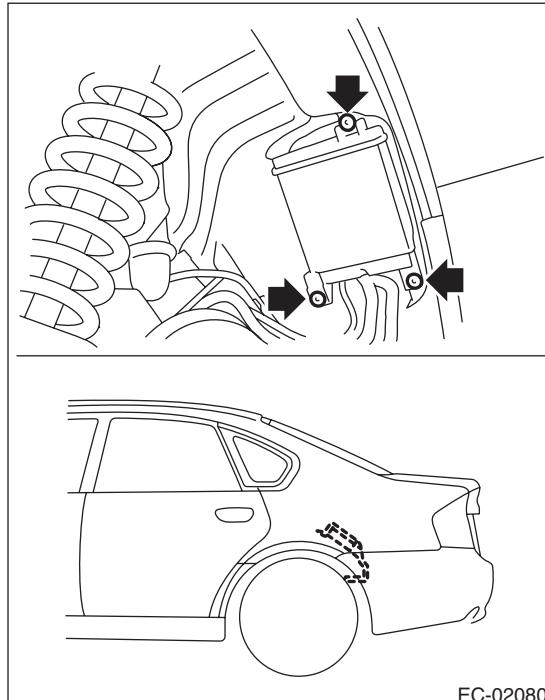

C: INSPECTION

Make sure the canister and canister hoses are not cracked or loose.