


# Fuel Temperature Sensor

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)

## 7. Fuel Temperature Sensor

### A: REMOVAL


The fuel temperature sensor is integrated into fuel level sensor as one unit; therefore, refer to "Fuel Level Sensor" for removal procedure. <Ref. to FU(H6DO)-51, REMOVAL, Fuel Level Sensor.>

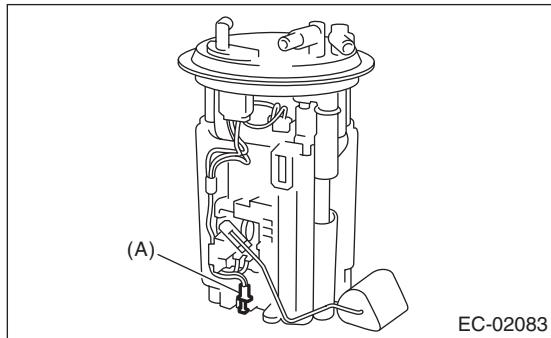

(A) Fuel temperature sensor

### B: INSTALLATION

The fuel temperature sensor and fuel level sensor are integrated into one unit; therefore, refer to "Fuel Level Sensor" for installation procedure. <Ref. to FU(H6DO)-51, INSTALLATION, Fuel Level Sensor.>

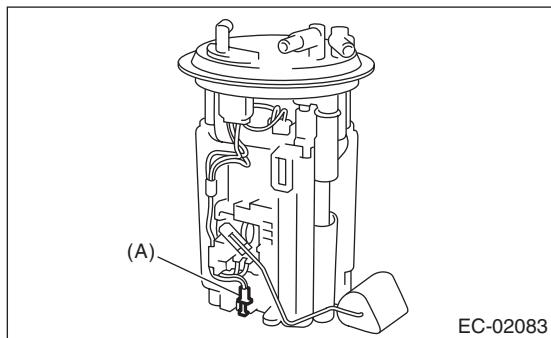

(A) Fuel temperature sensor