



10. Mass Air Flow and Intake Air Temperature Sensor

A: REMOVAL


- 1) Disconnect the ground cable from the battery.

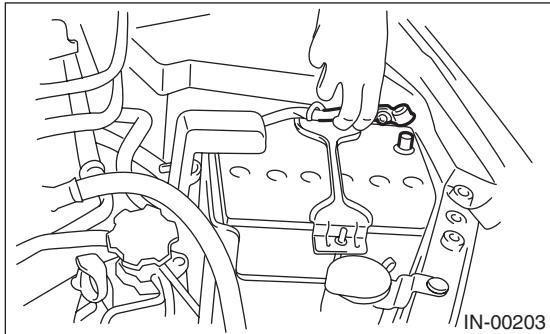

- 2) Disconnect the connectors from the mass air flow and intake air temperature sensor.

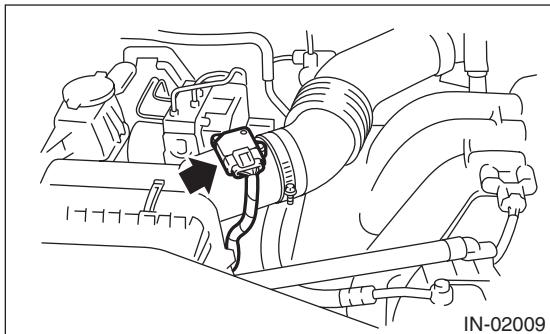

- 3) Remove the mass air flow and intake air temperature sensor.

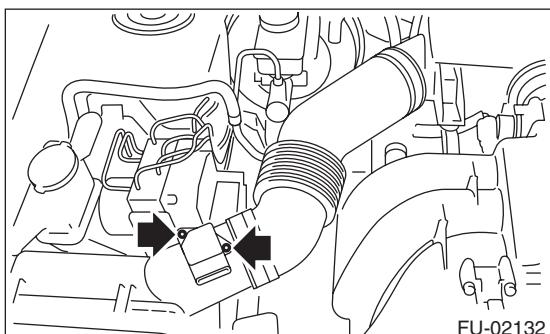

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

1 N·m (0.1 kgf·m, 0.7 ft-lb)