


11. Fuel Injector


A: REMOVAL

1. RH SIDE


- 1) Remove the collector cover.
- 2) Release the fuel pressure. <Ref. to FU(H6DO)-38, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>
- 3) Open the fuel filler flap lid, and remove the fuel filler cap.
- 4) Disconnect the ground cable from the battery.

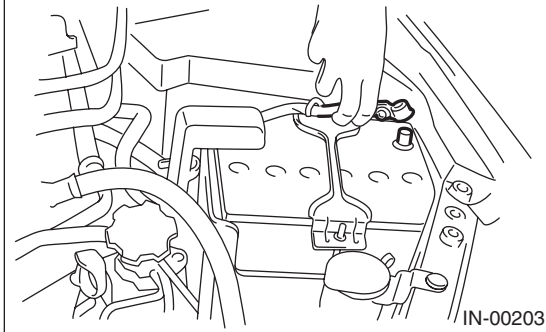

- 5) Remove the air cleaner case. <Ref. to IN(H6DO)-5, REMOVAL, Air Cleaner Case.>
- 6) Remove the fuel pipe protector RH.

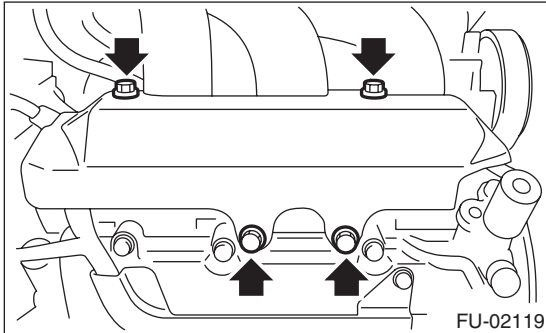


- 7) Disconnect the connector from fuel injector.

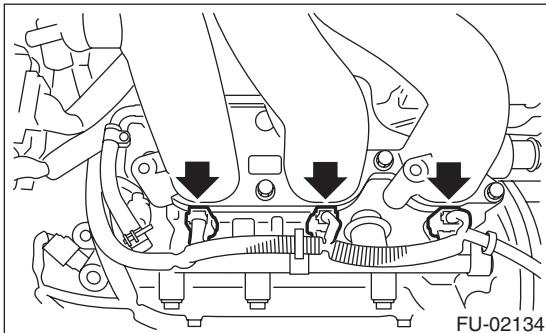

- 8) Remove the engine harness from the fuel injector pipe RH.


- 9) Remove the bolt which holds fuel injector pipe onto intake manifold.

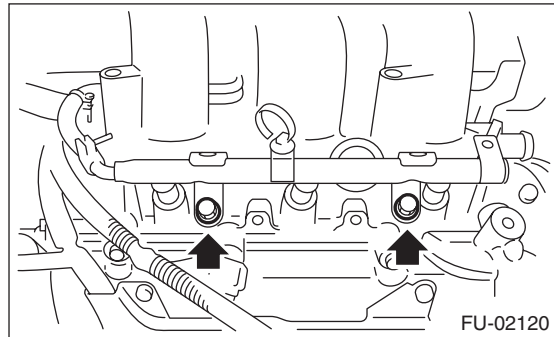


- 10) Remove the fuel injector while lifting up the fuel injector pipe.

2. LH SIDE

- 1) Remove the collector cover.
- 2) Release the fuel pressure. <Ref. to FU(H6DO)-38, RELEASING OF FUEL PRESSURE, PROCEDURE, Fuel.>
- 3) Open the fuel filler flap lid, and remove the fuel filler cap.
- 4) Remove the battery.
- 5) Remove the generator harness from the fuel pipe protector LH.
- 6) Remove the fuel pipe protector LH.

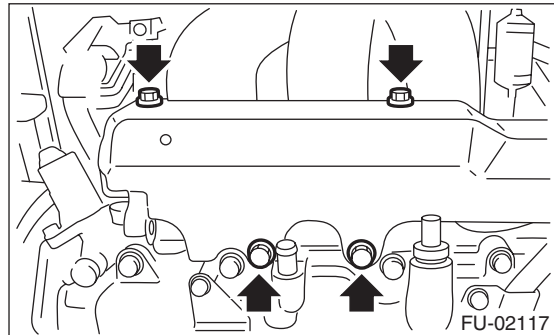

- 7) Disconnect the connector from fuel injector.

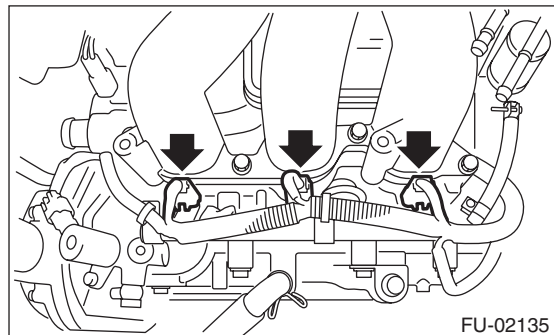


- 8) Remove the engine harness from the fuel injector pipe LH.

Fuel Injector

FUEL INJECTION (FUEL SYSTEMS)

9) Remove the bolt which holds fuel injector pipe onto intake manifold.

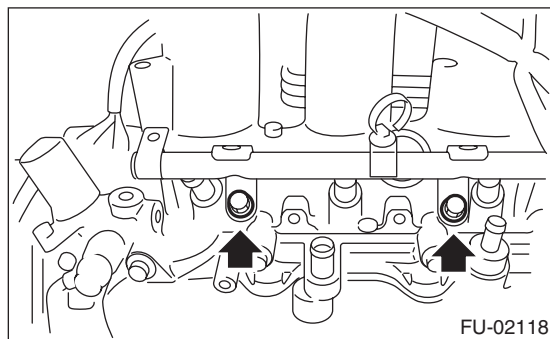

10) Remove the fuel injector while lifting up the fuel injector pipe.

B: INSTALLATION

1. RH SIDE


Install in the reverse order of removal.

NOTE:

Use new O-rings.


Tightening torque:

19 N·m (1.9 kgf-m, 14 ft-lb)

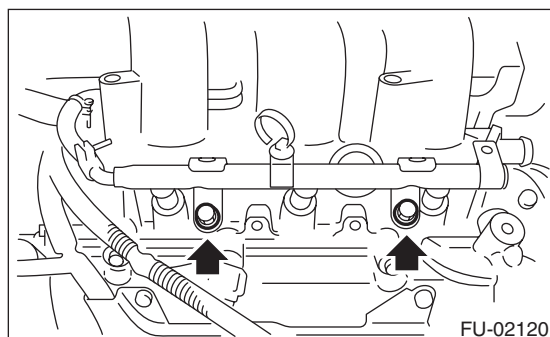

Tightening torque:

19 N·m (1.9 kgf-m, 14 ft-lb)

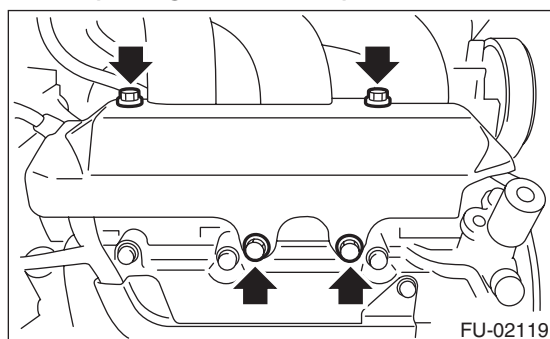

2. LH SIDE


Install in the reverse order of removal.

NOTE:

Use new O-rings.

Tightening torque:

19 N·m (1.9 kgf-m, 14 ft-lb)

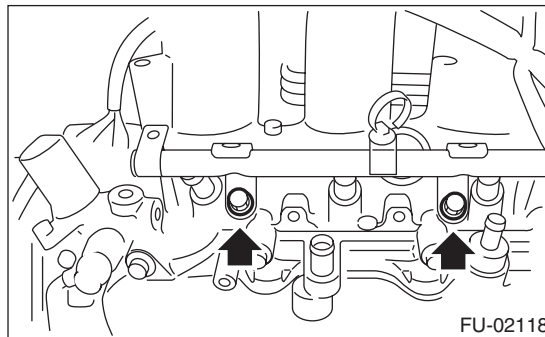

Tightening torque:

19 N·m (1.9 kgf-m, 14 ft-lb)

