

## 25. Fuel Level Sensor

### A: REMOVAL

**WARNING:**

Place "NO OPEN FLAMES" signs near the working area.


**CAUTION:**

- Be careful not to spill fuel.
- Before starting work, be sure to reduce fuel in the fuel tank to 3/4 of the tank or less. If there is more fuel in the tank, fuel may spill out.

**NOTE:**

The fuel level sensor is built in fuel pump assembly.

- 1) Remove the fuel pump assembly. <Ref. to FU(H6DO)-49, REMOVAL, Fuel Pump.>
- 2) Disconnect the connector from fuel pump bracket.
- 3) Remove the fuel temperature sensor.
- 4) Remove the fuel level sensor.

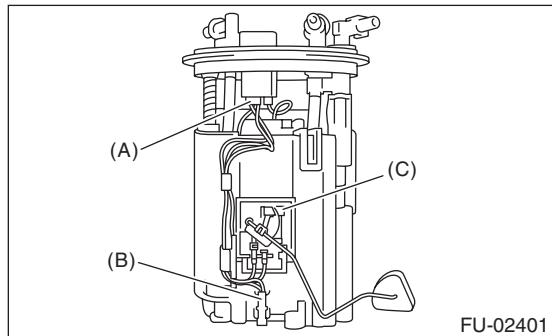

- (A) Connector
- (B) Fuel temperature sensor
- (C) Fuel level sensor

### B: INSTALLATION

Install in the reverse order of removal.