


Engine Coolant Temperature Sensor

FUEL INJECTION (FUEL SYSTEMS)


4. Engine Coolant Temperature Sensor

A: REMOVAL

- 1) Remove the collector cover.
- 2) Disconnect the ground cable from the battery.

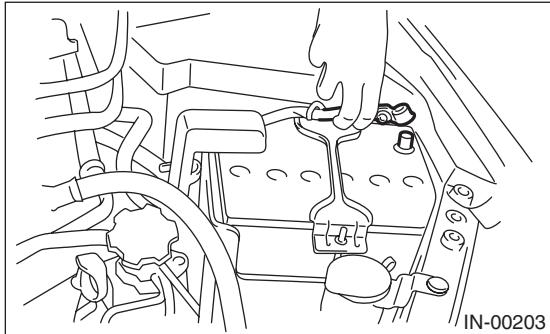

- 3) Disconnect the connectors from the engine coolant temperature sensor.
- 4) Remove the engine coolant temperature sensor.

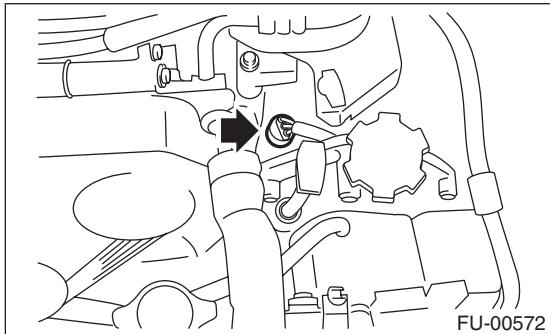

B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

18 N·m (1.8 kgf·m, 13.3 ft-lb)

