


Air Cleaner Element

INTAKE (INDUCTION)


2. Air Cleaner Element

A: REMOVAL


- 1) Disconnect the ground cable from the battery.

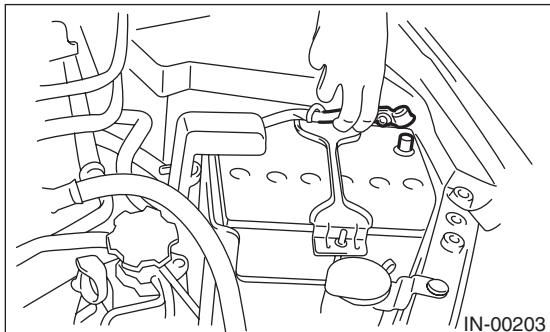

- 2) Disconnect the connector from mass air flow and intake air temperature sensor.

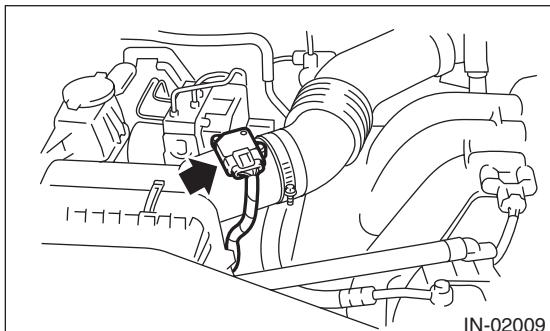

- 3) Remove the clip (A) securing upper side of air cleaner case.

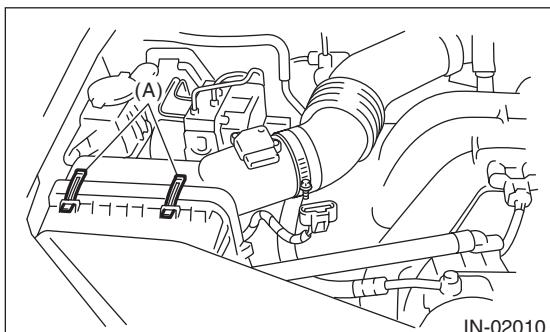

- 4) Pull the air cleaner case (rear) backward of the vehicle, and remove the air cleaner element.

NOTE:

Be careful of the power steering hose fixed to the bottom of the air cleaner case (rear).

B: INSTALLATION


Install in the reverse order of removal.

CAUTION:

Be sure to use SUBARU genuine air cleaner element depending on the engine type when replacing the air cleaner elements. Otherwise engine performance may be damaged.

NOTE:

Fasten with a clip after inserting the lower tab of case.

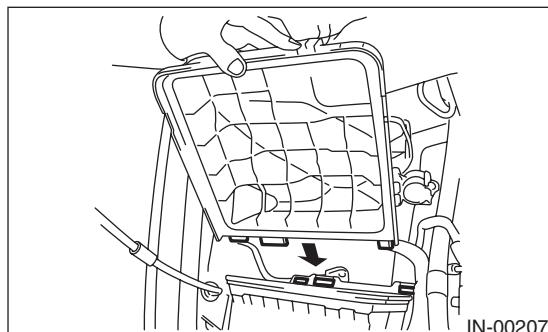

C: INSPECTION

Replace if excessively damaged or dirty.