


3. Air Cleaner Case

A: REMOVAL


1) Disconnect the ground cable from the battery.

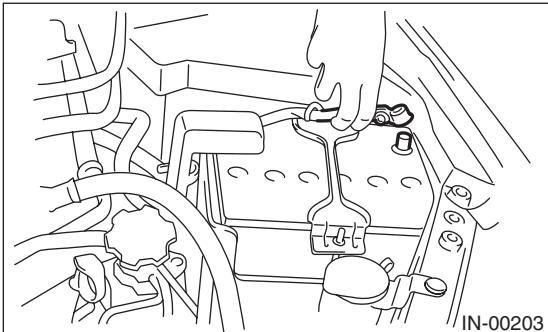

IN-0203

2) Remove the air intake duct. <Ref. to IN(H6DO)-7, REMOVAL, Air Intake Duct.>


3) Disconnect the connector from mass air flow and intake air temperature sensor.

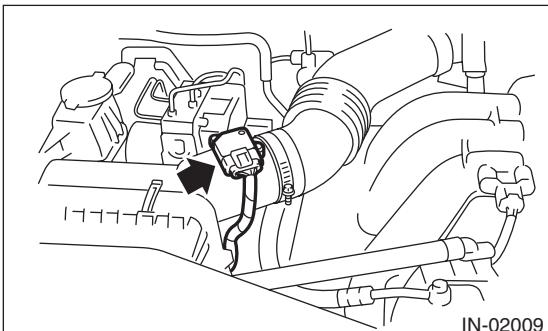

IN-0209


4) Loosen the clamps (A) which connect the air cleaner case and the intake boot.

5) Remove the clip (B) securing the upper side of air cleaner case.

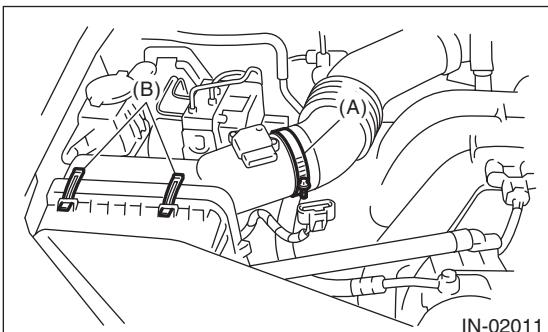


IN-0211

6) Remove the air cleaner case (rear) and air cleaner element.

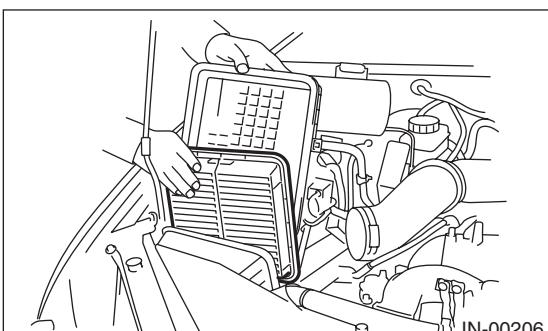

IN-0206

7) Remove the bolts (A) and nut (B) which secure the air cleaner case to body.

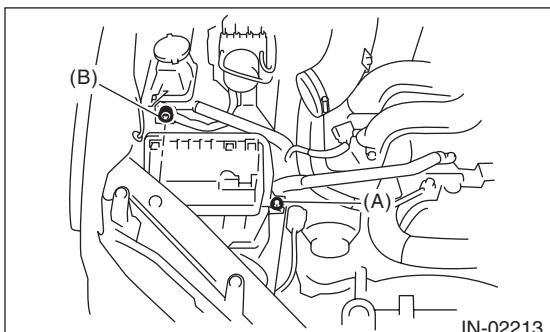

IN-02213

8) Remove the air cleaner case (front).


B: INSTALLATION

Install in the reverse order of removal.

Tightening torque:

Bolt (A): 6.0 N·m (0.6 kgf·m, 4.4 ft-lb)


Nut (B): 7.5 N·m (0.76 kgf·m, 5.5 ft-lb)

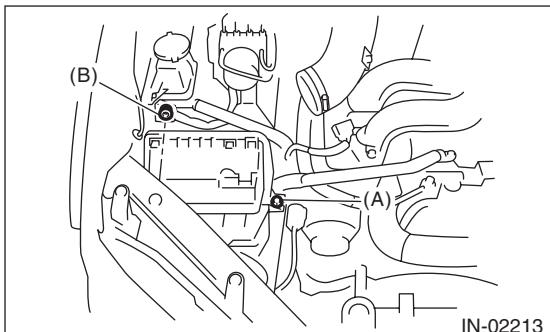

IN-02213

NOTE:

Fasten with a clip after inserting the lower tab of case.

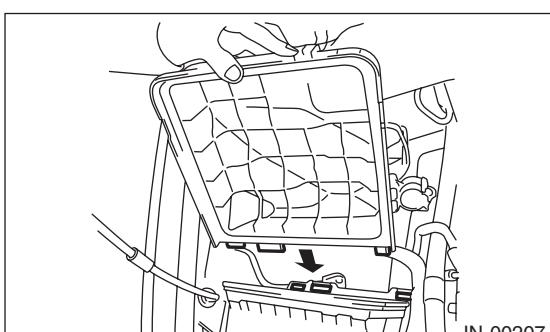

IN-0207

C: INSPECTION

Check for cracks or loose connections.