

22.Oil Flow Control Solenoid Valve

A: REMOVAL

Oil flow control solenoid valve is a unit with cam-shaft cap. Refer to "Camshaft" for removal procedure. <Ref. to ME(H6DO)-51, REMOVAL, Camshaft.>

B: INSTALLATION

Install in the reverse order of removal.