

1. General Description

A: SPECIFICATION

Specifications for the 3.0 L DOHC non-turbo model are included in the SC(H4SO) section. <Ref. to SC(H4SO)-2, General Description.>

ENGINE (DIAGNOSTICS)

EN(H6DO)(diag)

	Page
1. Basic Diagnostic Procedure	2
2. Check List for Interview	3
3. General Description	5
4. Electrical Component Location	8
5. Engine Control Module (ECM) I/O Signal	16
6. Engine Condition Data	26
7. Data Link Connector	27
8. General Scan Tool	28
9. Subaru Select Monitor	33
10. Read Diagnostic Trouble Code (DTC)	42
11. Inspection Mode	43
12. Drive Cycle	48
13. Clear Memory Mode	54
14. Compulsory Valve Operation Check Mode	55
15. System Operation Check Mode	56
16. Malfunction Indicator Light	58
17. Diagnostics for Engine Starting Failure	67
18. List of Diagnostic Trouble Code (DTC)	80
19. Diagnostic Procedure with Diagnostic Trouble Code (DTC)	88
20. General Diagnostic Table	344