

## 10. Transmission Mounting System


### A: REMOVAL

#### 1. PITCHING STOPPER

1) Remove the air intake chamber.

<Ref. to IN(H4SO)-7, REMOVAL, Air Intake Chamber.>

2) Remove the pitching stopper.

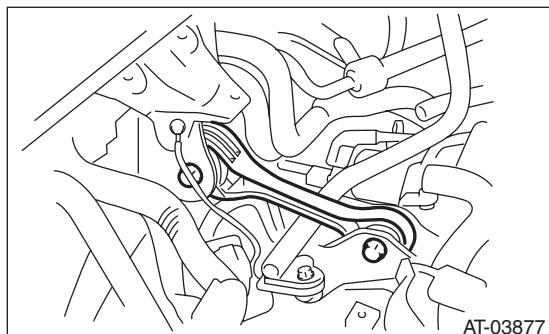

#### 2. TRANSMISSION REAR CROSSMEMBER AND REAR CUSHION RUBBER

1) Disconnect the ground cable from the battery.

2) Jack-up the vehicle and support it with rigid racks.


3) Remove the front, center and rear exhaust pipes and the muffler.

<Ref. to EX(H4SO)-4, REMOVAL, Front Exhaust Pipe.> <Ref. to EX(H4SO)-8, REMOVAL, Rear Exhaust Pipe.> <Ref. to EX(H4SO)-10, REMOVAL, Muffler.>

4) Remove the heat shield cover.

5) Set the transmission jack under transmission. Make sure that the support plate of transmission jack does not touch the oil pan.

6) Remove the transmission rear crossmember.

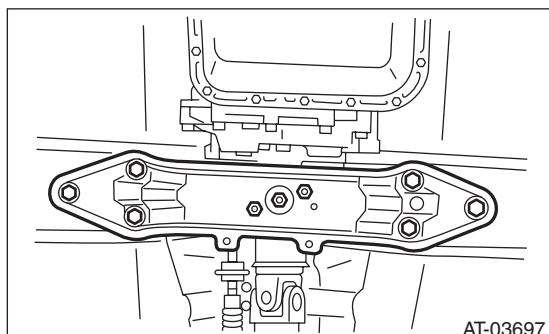

7) Remove the rear cushion rubber.

### B: INSTALLATION


#### 1. PITCHING STOPPER

1) Install the pitching stopper.

**Tightening torque:**

**T1: 50 N·m (5.1 kgf-m, 37 ft-lb)**

**T2: 58 N·m (5.9 kgf-m, 43 ft-lb)**

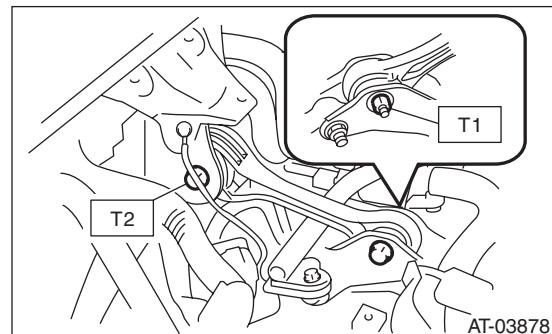

2) Install the air intake chamber.

<Ref. to IN(H4SO)-7, INSTALLATION, Air Intake Chamber.>

#### 2. TRANSMISSION REAR CROSSMEMBER AND REAR CUSHION RUBBER

1) Install the rear cushion rubber.

**Tightening torque:**


**40 N·m (4.1 kgf-m, 29.5 ft-lb)**

2) Install the cross member.

**Tightening torque:**

**T1: 35 N·m (3.6 kgf-m, 26 ft-lb)**

**T2: 75 N·m (7.6 kgf-m, 55 ft-lb)**

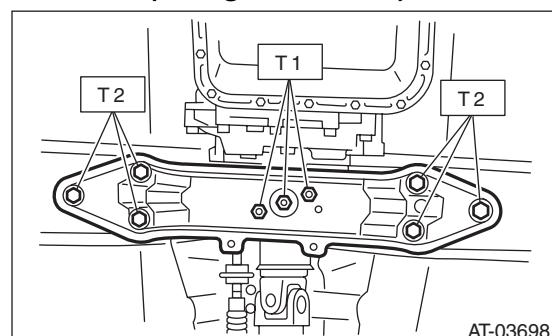

3) Remove the transmission jack.

4) Install the heat shield cover.

5) Install the front, center and rear exhaust pipes, and the muffler.

<Ref. to EX(H4SO)-5, INSTALLATION, Front Exhaust Pipe.> <Ref. to EX(H4SO)-8, INSTALLATION, Rear Exhaust Pipe.> <Ref. to EX(H4SO)-10, INSTALLATION, Muffler.>

# Transmission Mounting System

## AUTOMATIC TRANSMISSION

---

### C: INSPECTION

Repair or replace parts if the results of the inspection below are not satisfied.

#### 1. PITCHING STOPPER

Make sure that the pitching stopper is not bent or damaged. Check that there are no cracks, hardening or damage on rubber parts.

#### 2. TRANSMISSION REAR CROSSMEMBER AND REAR CUSHION RUBBER

Make sure that the crossmember is not bent or damaged. Check that there are no cracks, hardening, or damage on cushion rubbers.