

16.Torque Converter Turbine Speed Sensor

A: REMOVAL

For removal procedure of the torque converter turbine speed sensor, refer to “Front Vehicle Speed Sensor”. <Ref. to 4AT-48, REMOVAL, Front Vehicle Speed Sensor.>

B: INSTALLATION

For installation procedure of the torque converter turbine speed sensor, refer to “Front Vehicle Speed Sensor”. <Ref. to 4AT-49, INSTALLATION, Front Vehicle Speed Sensor.>