


23. Air Breather Hose

A: REMOVAL

1) Remove the air intake chamber.

<Ref. to IN(H4SO)-7, REMOVAL, Air Intake Chamber.>

2) Disconnect the air breather hose.

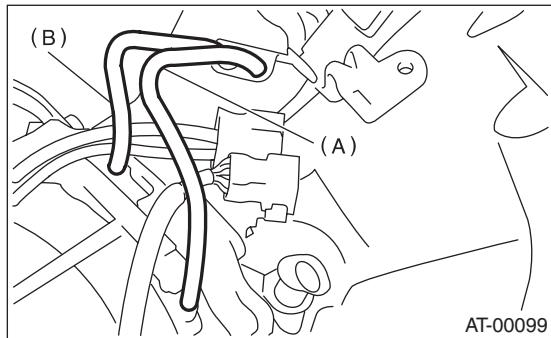


(A) Air breather hose (Transmission case)

(B) Air breather hose (Oil pump housing)

B: INSTALLATION

1) Install the air breather hose.

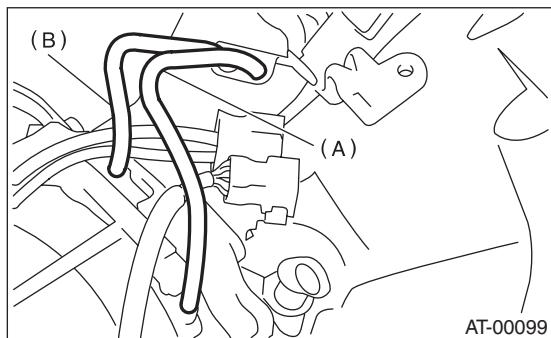

(A) Air breather hose (Transmission case)

(B) Air breather hose (Oil pump housing)

2) Install the air intake chamber.

<Ref. to IN(H4SO)-7, INSTALLATION, Air Intake Chamber.>

C: INSPECTION

Make sure the hose is not cracked or clogged.