


## 24. Oil Charge Pipe

### A: REMOVAL

1) Remove the air intake chamber.

<Ref. to IN(H4SO)-7, REMOVAL, Air Intake Chamber.>

2) Remove the oil charge pipe, and then remove the O-ring from the flange side.

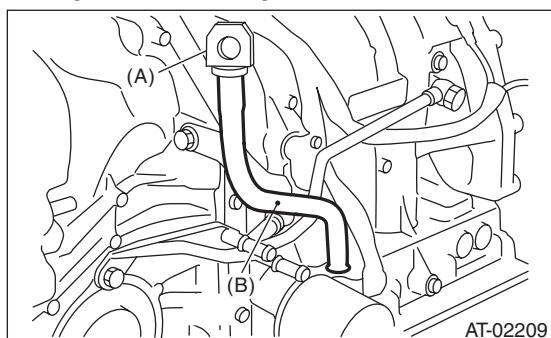

(A) Oil level gauge


(B) Oil charge pipe

### B: INSTALLATION

1) Apply ATF on a new O-ring and install together with the oil charge pipe.

**Tightening torque:**

41 N·m (4.2 kgf·m, 30.4 ft-lb)

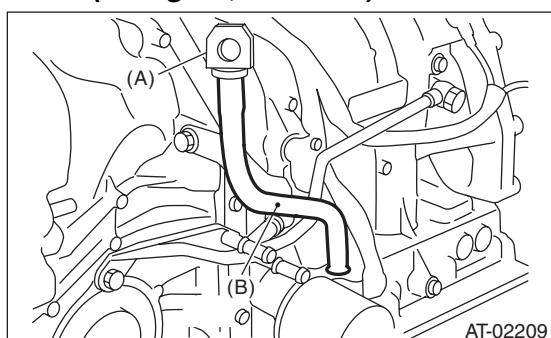

(A) Oil level gauge

(B) Oil charge pipe

2) Install the air intake chamber.

<Ref. to IN(H4SO)-7, INSTALLATION, Air Intake Chamber.>

### C: INSPECTION

Make sure the oil charge pipe is not deformed or damaged.