

## 8. Transfer Clutch Pressure Test

### A: INSPECTION

Check the transfer clutch pressure in accordance with the following chart in the same manner as line pressure. <Ref. to 4AT-32, Line Pressure Test.>


ST 498897700 OIL PRESSURE ADAPTER

SET

ST 498575400 OIL PRESSURE GAUGE  
ASSY

#### NOTE:

- Before setting to FWD mode, install the spare fuse on the FWD mode switch.

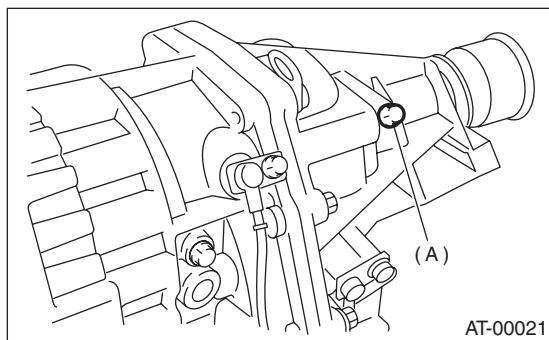

(A) Test plug

- If no oil pressure is produced or if it does not change in AWD mode, the control valve body may be malfunctioning.
- If oil pressure is produced in FWD mode, there is the same problem as the AWD mode.

Range position	ON duty ratio (%)	Acceleration opening angle (%)	Standard transfer clutch pressure kPa (kg/cm <sup>2</sup> , psi)	
			AWD mode	FWD mode
Manual mode (2nd)	95	Fully opened (100)	1,000 — 1,200 (10.2 — 12.2, 145 — 174)	—
	60	Adjust ON Duty ratio to 60%.	500 — 700 (5.1 — 7.1, 73 — 102)	—
	—	Fully closed (0)	—	0 (0, 0)
N or P	5	Fully closed (0)	0	—