


## 22. Air Breather Hose


### A: REMOVAL

- 1) Remove the intercooler. (Turbo model) <Ref. to IN(H4DOTC)-12, REMOVAL, Intercooler.>
- 2) Remove the air intake chamber. (Non-turbo model) <Ref. to IN(H6DO)-6, REMOVAL, Air Intake Chamber.>
- 3) Disconnect the air breather hose.

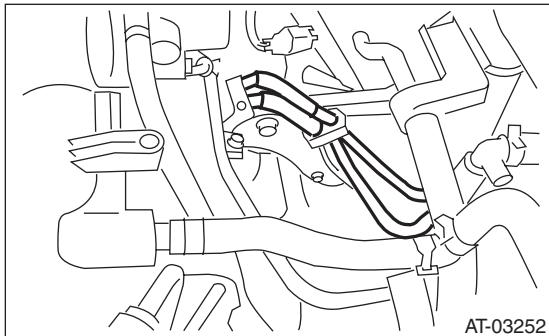

### B: INSTALLATION

- 1) Connect the air breather hose.

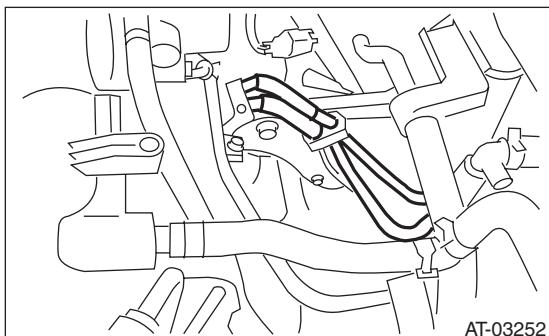

- 2) Install the intercooler. (Turbo model) <Ref. to IN(H4DOTC)-12, INSTALLATION, Intercooler.>
- 3) Install the air intake chamber. (Non-turbo model) <Ref. to IN(H6DO)-6, INSTALLATION, Air Intake Chamber.>

### C: INSPECTION

Make sure the hose is not cracked or clogged.