

### 7. Read Diagnostic Trouble Code (DTC)

#### A: OPERATION

Refer to "Subaru Select Monitor" for information on how to display a DTC. <Ref. to 4AT(diag)-15, OPERATION, Subaru Select Monitor.>

For details concerning DTCs, refer to "List of Diagnostic Trouble Code (DTC)". <Ref. to 4AT(diag)-28, List of Diagnostic Trouble Code (DTC).>

##### NOTE:

It is not possible to read the DTC by ATF temperature warning light.