


9. Oil Pipe

A: REMOVAL

Remove the oil pipe.

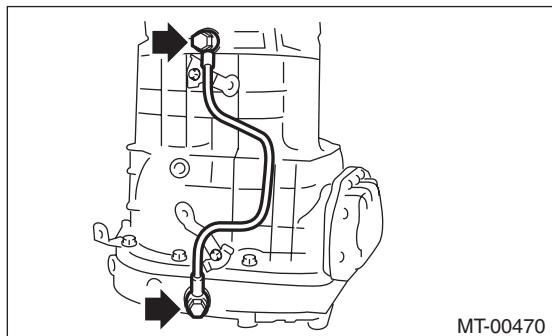

B: INSTALLATION


Install in the reverse order of removal.

NOTE:

Use a new gasket.

Tightening torque:

32 N·m (3.3 kgf·m, 23.6 ft-lb)

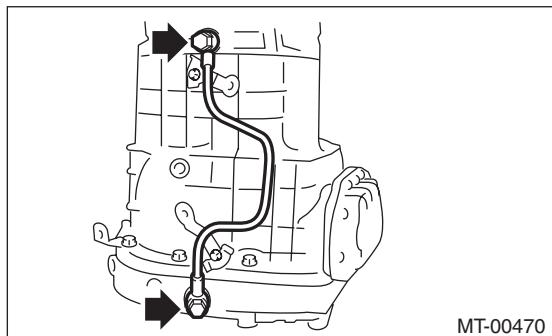

C: INSPECTION

- 1) Check that there is no damage on the pipe. Replace the pipe if there is damage.
- 2) Check the pipe connecting section for the oil leakage. If there is oil leakage, replace the gasket.