





## 5. Rear ABS Wheel Speed Sensor

### A: REMOVAL

- 1) Disconnect the ground cable from the battery.
- 2) Disconnect the connector from the rear ABS wheel speed sensor.

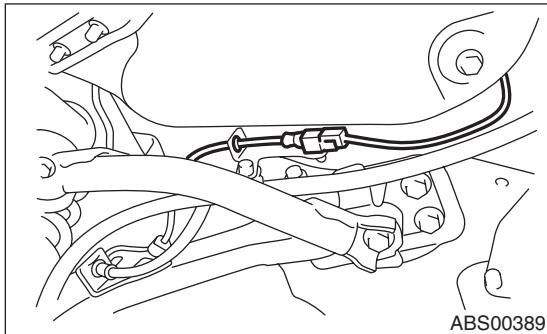


- 3) Remove the sensor harness bracket from the rear arm.

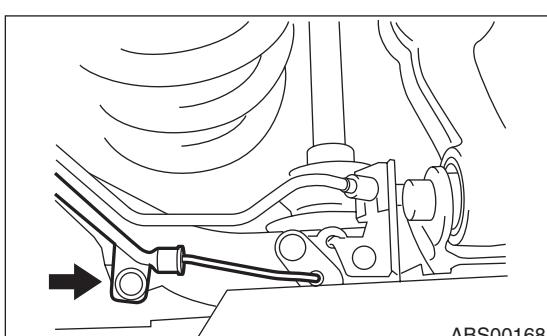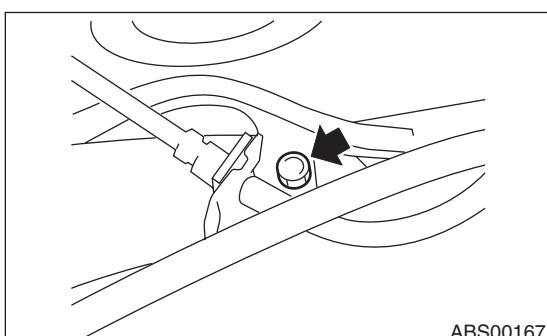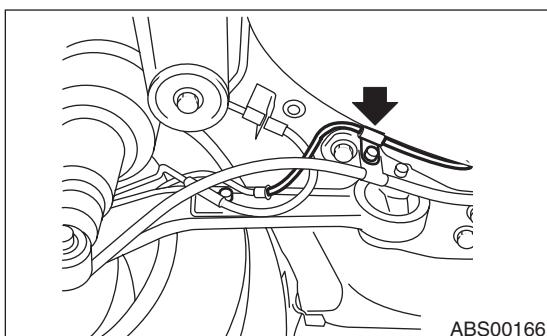

- 4) Remove the rear ABS wheel speed sensor from the rear arm.

#### CAUTION:

- Be careful not to damage the sensor.
- Do not apply excessive force to the sensor harness.

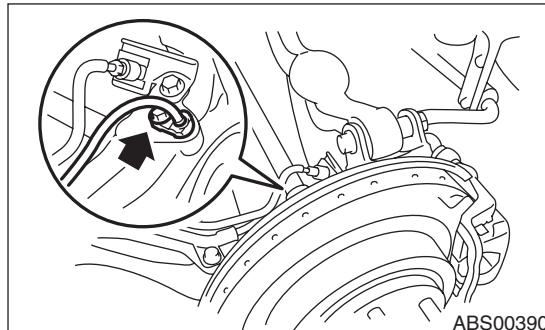

### B: INSTALLATION

Install in the reverse order of removal.

#### CAUTION:

Be careful not to damage the sensor.

#### Tightening torque:

##### Sensor:

7.5 N·m (0.76 kgf-m, 5.5 ft-lb)

##### Bracket:

33 N·m (3.3 kgf-m, 24 ft-lb)

#### NOTE:

Check the identification (mark) on the harness to make sure there is no warpage. (RH: K5 (White), LH: K6 (Yellow))

### C: INSPECTION

#### 1. ABS WHEEL SPEED SENSOR

<Ref. to ABS-14, ABS WHEEL SPEED SENSOR, INSPECTION, Front ABS Wheel Speed Sensor.>