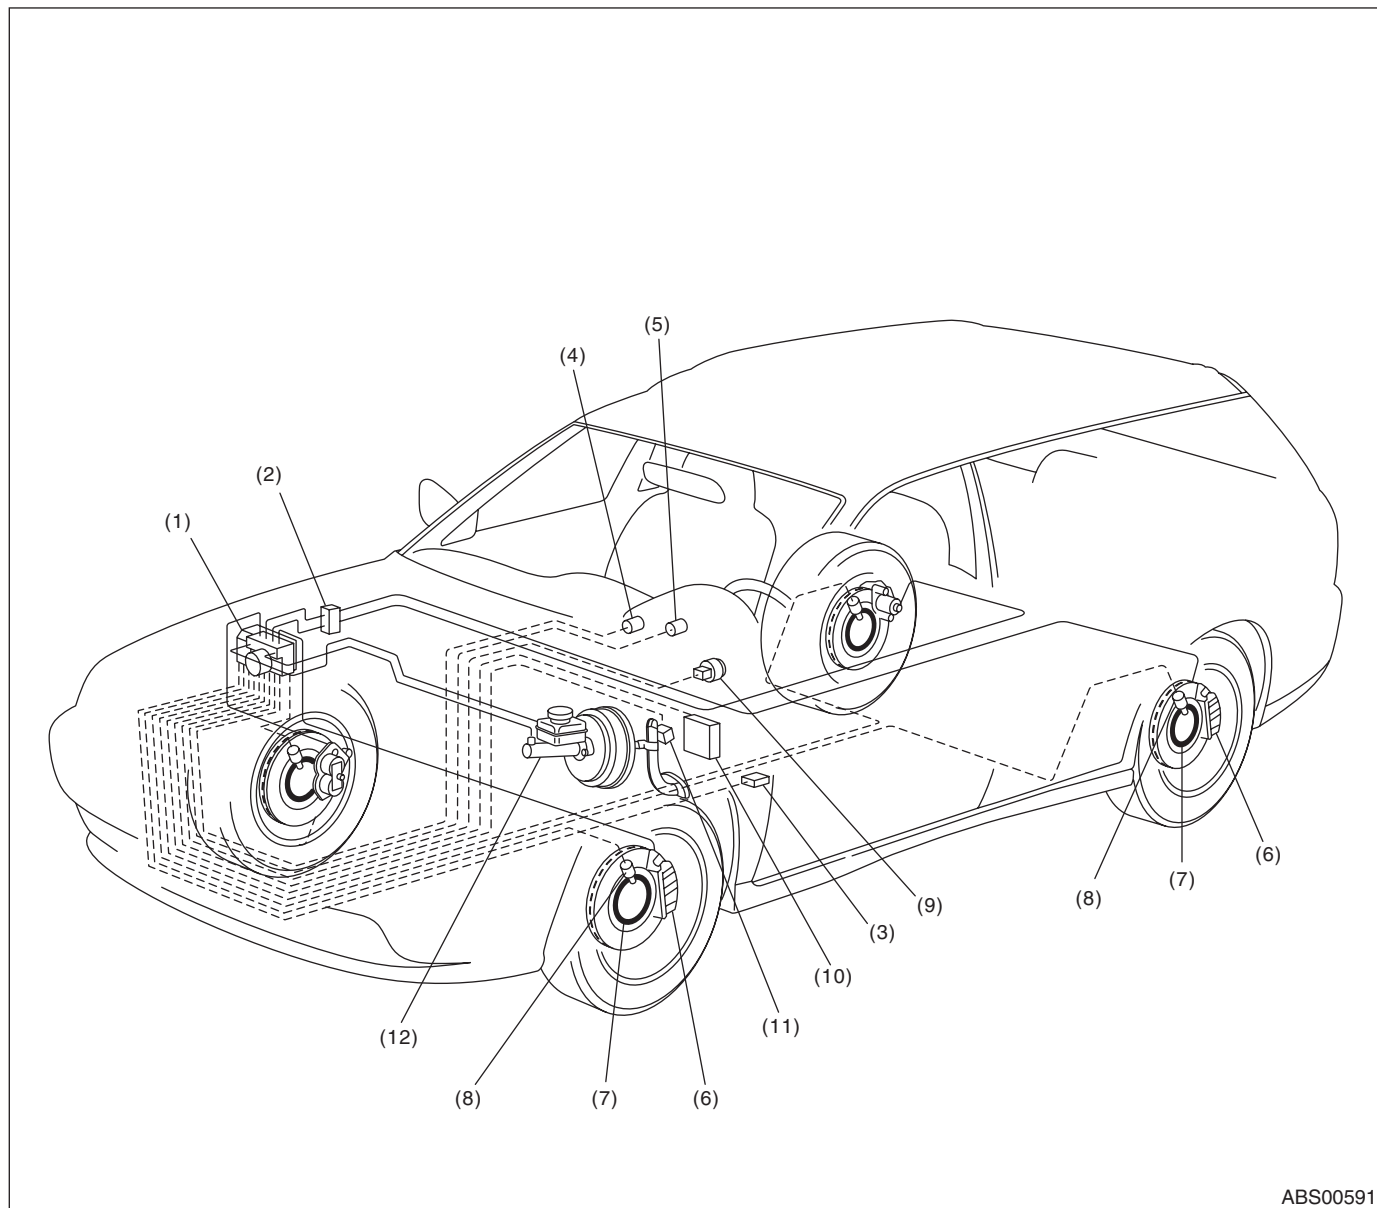


4. Electrical Component Location

A: LOCATION

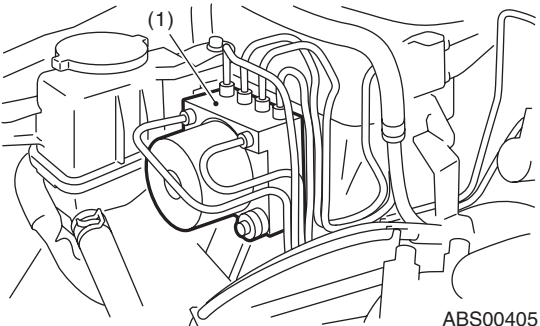
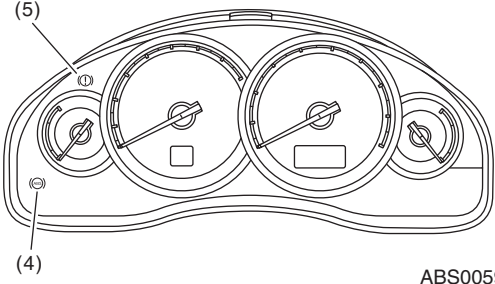
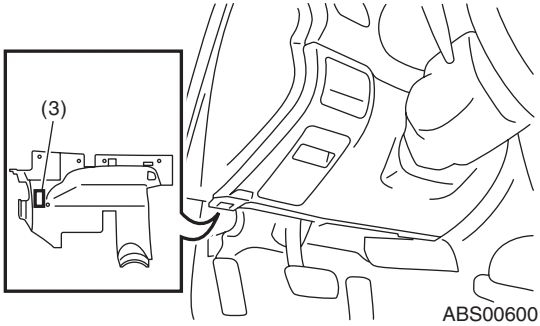
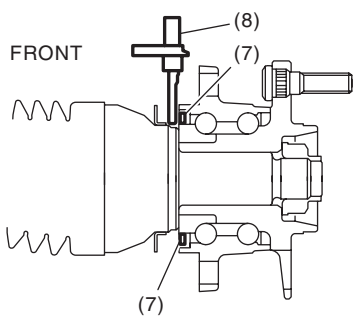
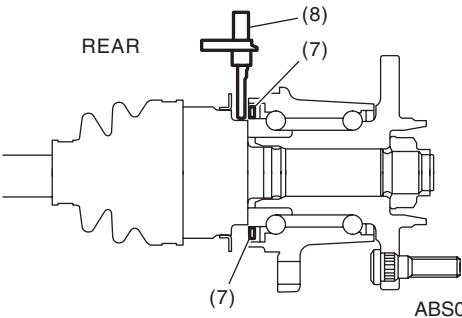
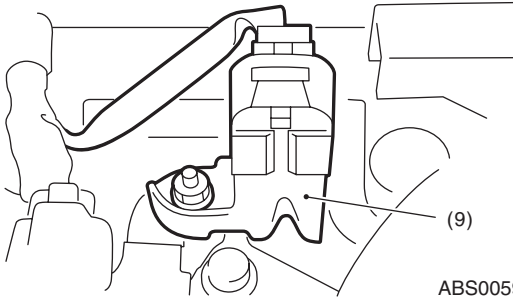


ABS00591

- | | | |
|---|---------------------------------|---|
| (1) ABS control module and hydraulic control unit (ABSCM&H/U) | (4) ABS warning light | (9) G sensor |
| (2) Two-way connector | (5) Brake and EBD warning light | (10) Transmission control module (TCM) (AT model) |
| (3) Data link connector (For Subaru Select Monitor) | (6) Caliper body | (11) Stop light switch |
| | (7) Magnetic encoder seal | (12) Master cylinder |
| | (8) ABS wheel speed sensor | |

Electrical Component Location

ABS (DIAGNOSTICS)

 Diagram showing the location of the ABS hydraulic modulator and pump assembly, labeled (1).	 Diagram showing the location of the ABS control module, labeled (5) and (4).
 Diagram showing the location of the ABS control module, labeled (3).	 Diagram showing the location of the front ABS hydraulic modulator and pump assembly, labeled (8) and (7). The word "FRONT" is also present.
 Diagram showing the location of the rear ABS hydraulic modulator and pump assembly, labeled (8) and (7). The word "REAR" is also present.	 Diagram showing the location of the ABS hydraulic modulator and pump assembly, labeled (9).