

## 3. Front Differential Assembly

### A: NOTE

#### 1. AT MODEL

- 4AT

For front differential of 4AT model, refer to “4AT” section. <Ref. to 4AT-93, Front Differential Assembly.>

- 5AT

For front differential of 5AT model, refer to “5AT” section. <Ref. to 5AT-88, Front Differential Assembly.>

#### 2. MT MODEL

For front differential of the manual transmission, refer to “5MT” or “6MT” section. <Ref. to 5MT-66, Front Differential Assembly.>