

General Diagnostic Table

DIFFERENTIALS

9. General Diagnostic Table

A: INSPECTION

Symptom or trouble	Possible cause	Remedy
1. Oil leakage	(1) Worn, scratched, or incorrectly seated front or side oil seal. Scored, battered or excessively worn sliding surface of companion flange. (2) Clogged or damaged air breather. (3) Loose bolts on differential spindle or side retainer, or incorrectly fitted O-ring. (4) Loose rear cover attaching bolts or damaged gasket. (5) Loose oil filler or drain plug. (6) Wear, damage or incorrect fitting of spindle, side retainer or oil seal.	Correct or replace. Clean, repair or replace. Tighten the bolts to specified torque. Replace the O-ring. Tighten the bolts to specified torque. Replace gasket and apply liquid gasket. Retighten and apply liquid gasket. Correct or replace.
2. Seizure NOTE: Seized or damaged parts should be replaced, and also other parts should be thoroughly checked for any defect and should be repaired or replaced as required.	(1) Insufficient backlash for hypoid gear. (2) Excessive preload for side, rear or front bearing. (3) Insufficient or improper oil used.	Readjust or replace. Readjust or replace. Replace seized part and fill with specified oil to specified level.
3. Damage NOTE: Damaged parts should be replaced, and also other parts should be thoroughly checked for any defect and should be repaired or replaced as required.	(1) Improper backlash for hypoid gear. (2) Insufficient or excessive preload for side, rear or front bearing. (3) Excessive backlash for differential gear. (4) Loose bolts and nuts such as hypoid driven gear bolt (5) Damage due to overloading.	Replace. Readjust or replace. Replace gear or thrust washer. Retighten. Replace.
4. Noises when starting or shifting gears NOTE: Noises may be caused by differential assembly, universal joint, wheel bearing, etc. Find out what is actually making noise before disassembling.	(1) Excessive backlash for hypoid gear. (2) Excessive backlash for differential gear. (3) Insufficient preload for front or rear bearing. (4) Loose drive pinion nut. (5) Loose bolts and nuts such as side bearing retainer attaching bolt.	Readjust. Replace gear or thrust washer. Readjust. Tighten to the specified torque. Tighten to the specified torque.
5. Noises when cornering	(1) Damaged differential gear. (2) Excessive wear or damage of thrust washer. (3) Broken pinion mate shaft. (4) Seized or damaged side bearing.	Replace. Replace. Replace.
6. Gear Noise NOTE: Since noises from engine, muffler, transmission, propeller shaft, wheel bearings, tires, and body are sometimes mistaken for noises from differential assembly, be careful in checking them. Inspection methods to locate noises include coasting, accelerating, cruising, and jacking-up all four wheels. Perform these inspections according to the condition of trouble. When listening to noises, shift gears into four wheel drive and fourth speed position, trying to pick up only differential noise.	(1) Improper tooth contact of hypoid gear. (2) Improper backlash of the hypoid gear. (3) Scored or chipped teeth of hypoid gear. (4) Seized hypoid gear. (5) Improper preload for front or rear bearings. (6) Seized, cut-away or chipped front or rear bearing. (7) Seized, cut-away or chipped side bearing. (8) Vibrating differential gear.	Readjust or replace hypoid gear set. Readjust. Replace hypoid gear set. Replace hypoid gear set. Readjust. Replace. Replace. Replace.

TRANSFER CASE

TC

	Page
1. General Description	2
2. Transfer Case and Extension Case Assembly	3
3. Transfer Clutch	4
4. Extension Case	5
5. Oil Seal	6
6. Transfer Drive Gear	7
7. Transfer Driven Gear	8
8. Reduction Drive Gear	9
9. Center Differential Carrier	10
10. Reduction Driven Gear	11
11. Center Differential	12
12. Transfer Clutch Pressure Test	13