

# General Description



## DRIVE SHAFT SYSTEM

### 1. General Description

#### A: SPECIFICATION

##### 1. PROPELLER SHAFT

Model	5MT	6MT	4AT	5AT
Propeller shaft type	EDJ			
Propeller shaft length: L	mm (in)	1,483 (58.39)	1,423 (56.02)	1,423 (56.02)
Front propeller shaft Joint-to-joint length: L <sub>1</sub>	mm (in)	735 (28.9)	675 (26.6)	675 (26.6)
Rear propeller shaft Joint-to-Joint length: L <sub>2</sub>	mm (in)		748 (29.4)	
Outer diameter of tube:	mm (in)	D <sub>1</sub>	63.5 (2.50)	
		D <sub>2</sub>	57.5 (2.26)	

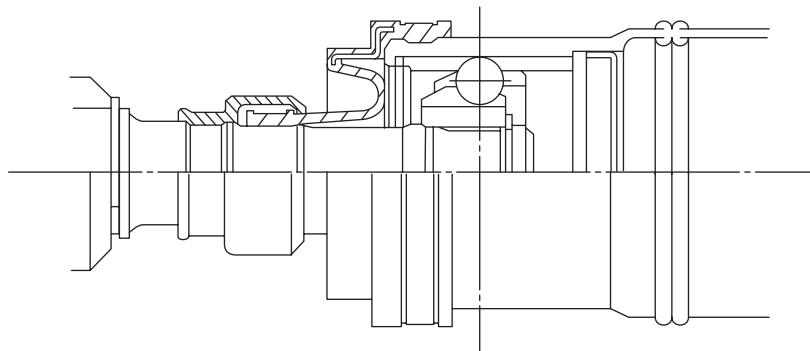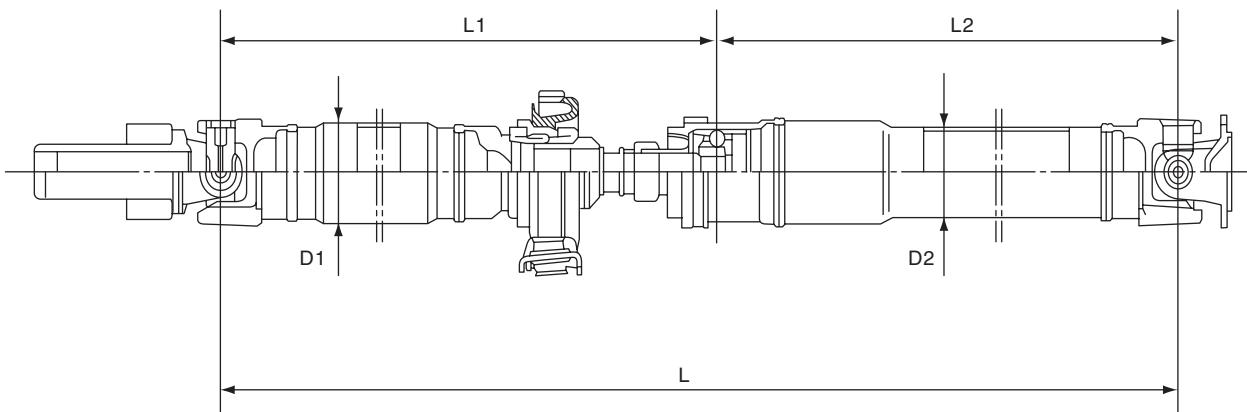


DS-00226

# General Description

## DRIVE SHAFT SYSTEM

### 2. FRONT DRIVE SHAFT ASSEMBLY

Model	Type of drive shaft	Axle diameter $\phi$ D mm (in)	Axle length L mm (in)
Turbo 5MT, 6MT	EBJ + PTJ	26 (1.0)	332.5 (13.09)
Other than above	EBJ + PTJ	26 (1.0)	349.6 (13.76)

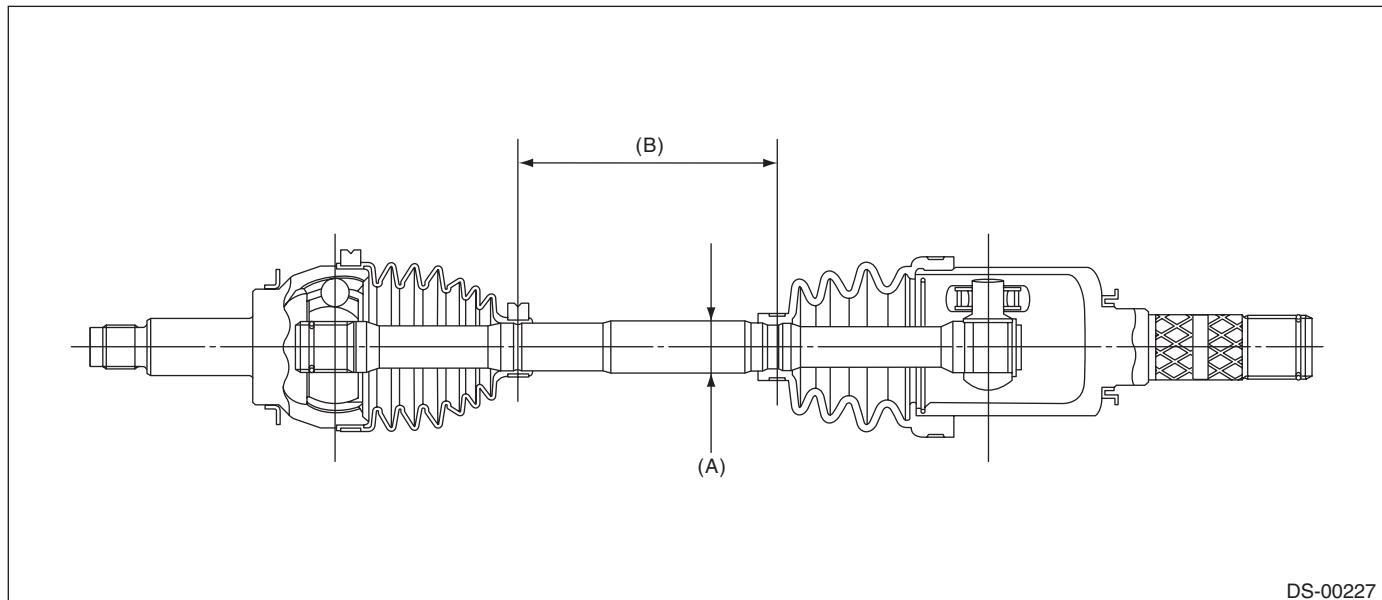


(A) Axle diameter

(B) Axle length

### 3. REAR DRIVE SHAFT ASSEMBLY

Model	Type of drive shaft	Axle diameter $\phi$ D mm (in)	Axle length L mm (in)
2.5 i AT	BJ + DOJ	22 (0.87)	366.5 (14.43)
6MT	EBJ + DOJ	22 (0.87)	331.8 (13.06)
Other than above	EBJ + DOJ	22 (0.87)	375.1 (14.77)

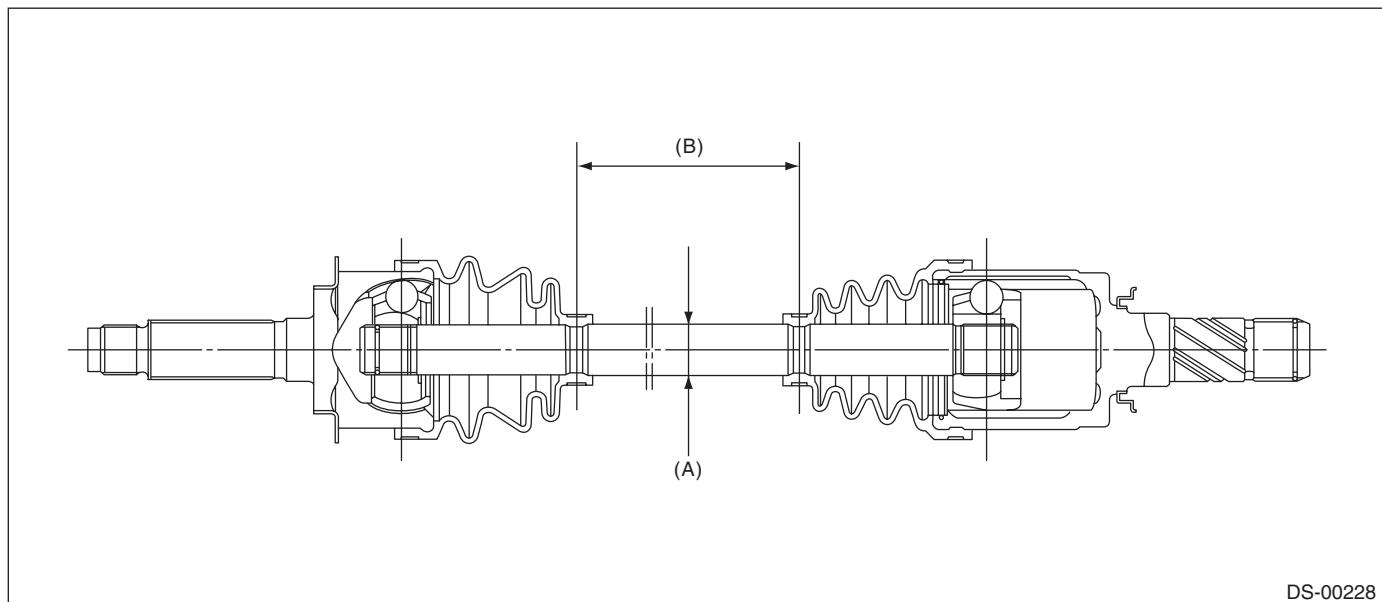

(A) Axle diameter


(B) Axle length

# General Description

## DRIVE SHAFT SYSTEM

### B: COMPONENT

#### 1. PROPELLER SHAFT

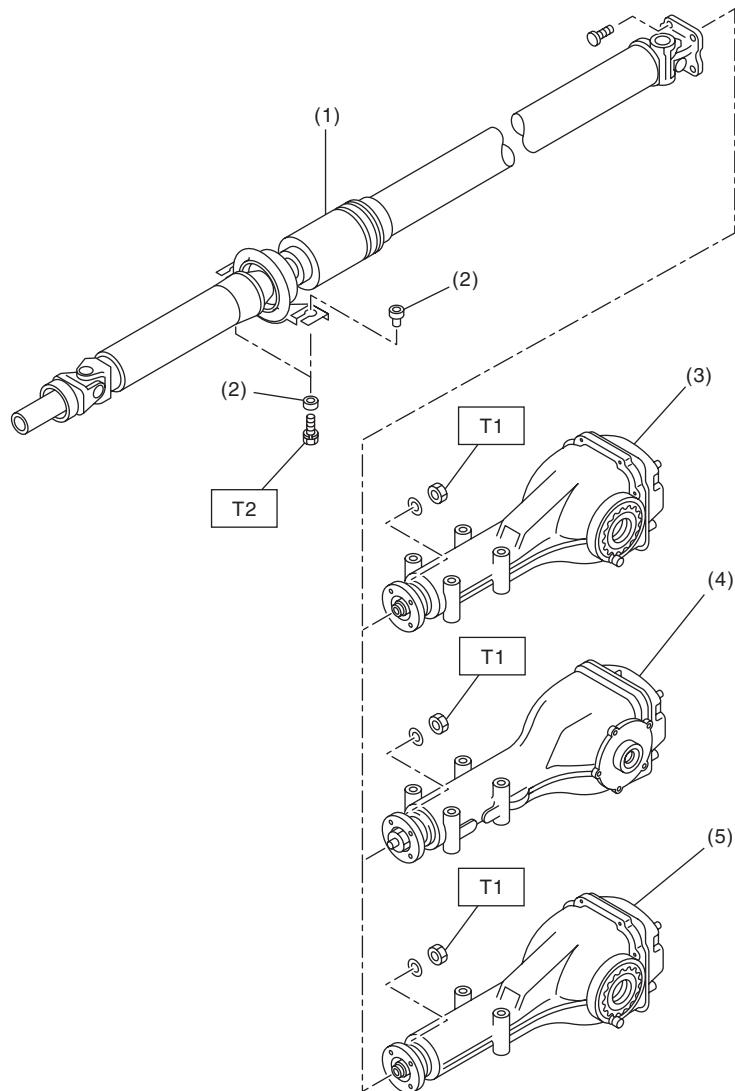

DS-00229

(1) Propeller shaft

(2) Bushing

(3) Rear differential (VA1-type)

(4) Rear differential (T-type)


(5) Rear differential (VA2-type)

***Tightening torque: N·m (kgf·m, ft-lb)***

***T1: 31 (3.2, 23.1)***

***T2: 52 (5.3, 38.3)***

### 2. FRONT AXLE

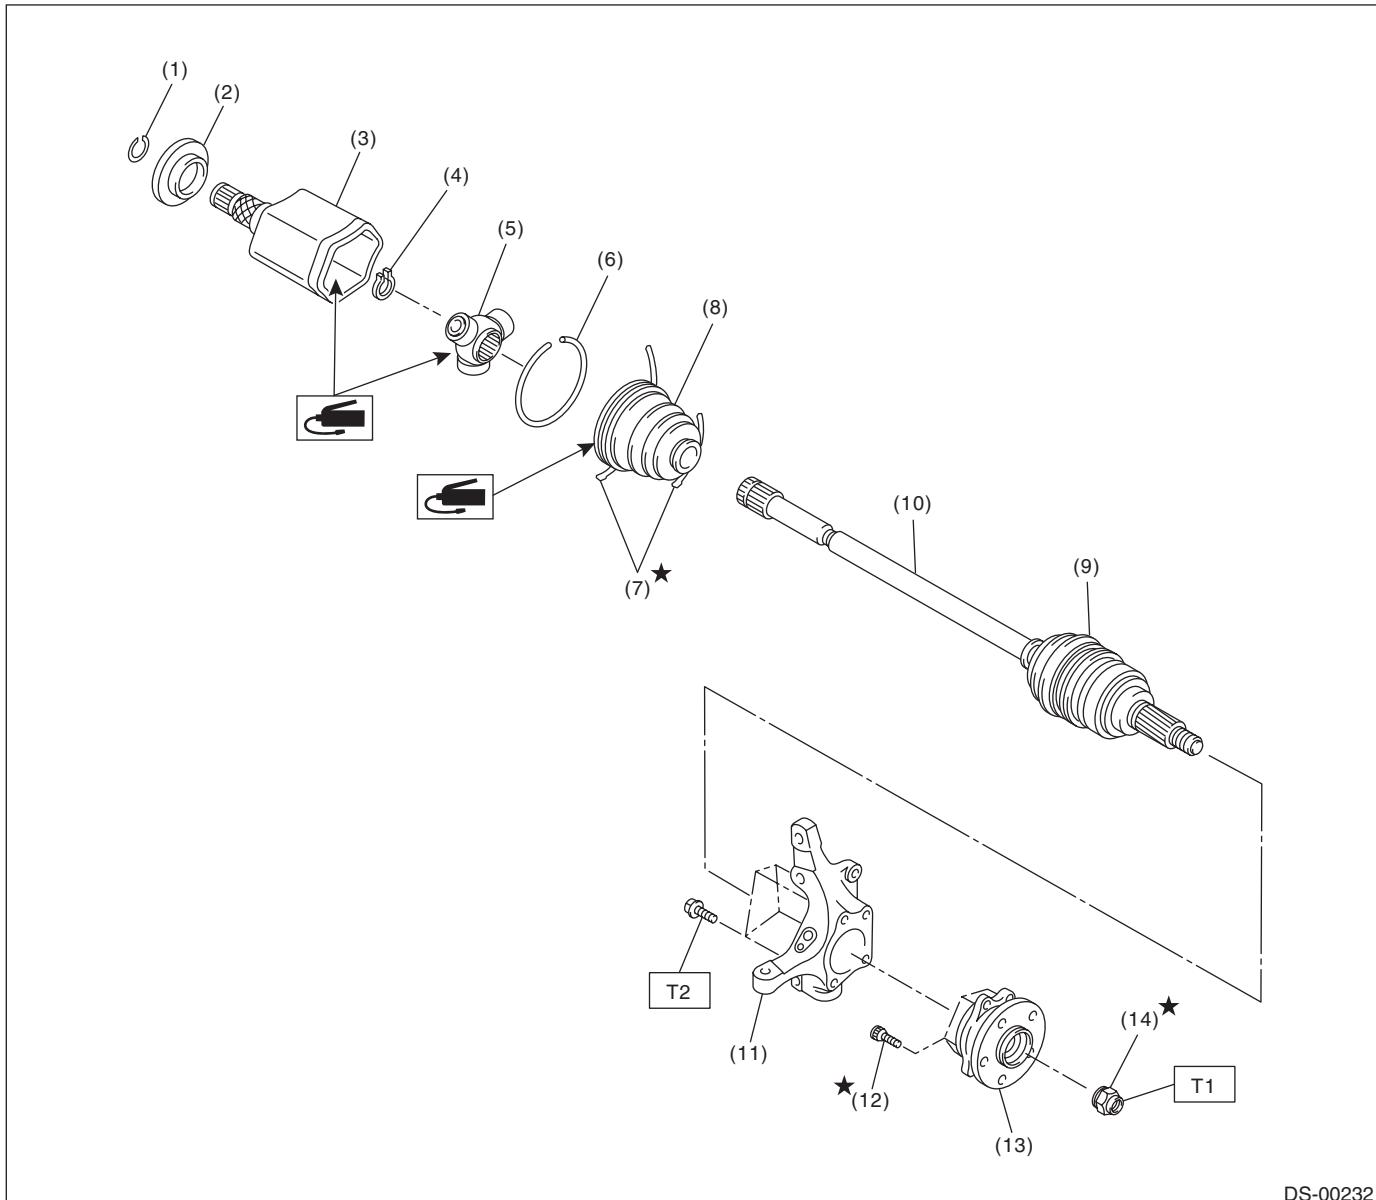

- (1) Circlip
- (2) Baffle plate
- (3) Outer race (PTJ)
- (4) Snap ring
- (5) Trunnion
- (6) Snap ring

- (7) Boot band
- (8) Boot (PTJ)
- (9) Boot (EBJ)
- (10) EBJ shaft ASSY
- (11) Housing
- (12) Hub bolt

- (13) Front hub unit bearing
- (14) Axle nut

#### ***Tightening torque:N·m (kgf·m, ft-lb)***


***T1: 220 (22.4, 162)***

***T2: 65 (6.6, 47.9)***

# General Description

## DRIVE SHAFT SYSTEM

### 3. REAR AXLE

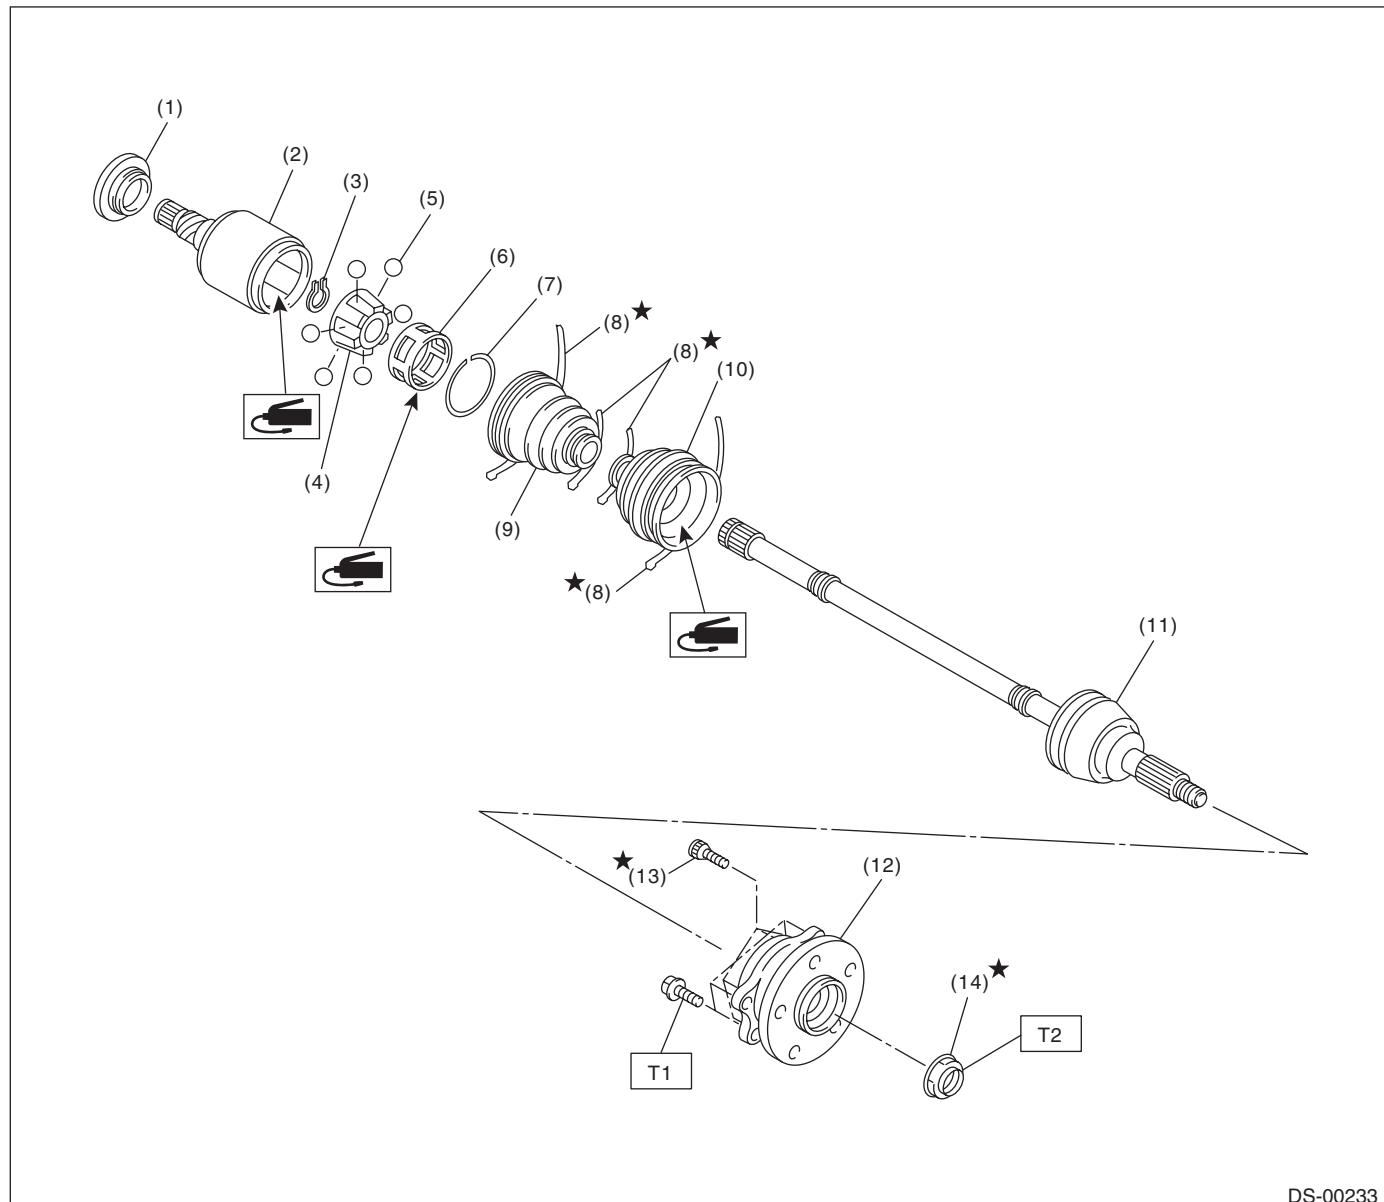

(1) Baffle plate (DOJ)	(8) Boot band	(13) Hub bolt
(2) Outer race (DOJ)	(9) Boot (DOJ)	(14) Axle nut (olive color)
(3) Snap ring	(10) Boot (BJ)	
(4) Inner race	(11) BJ shaft ASSY (2.5 i AT model)	
(5) Ball	EBJ shaft ASSY (Except for 2.5 i AT model)	
(6) Cage		
(7) Snap ring	(12) Rear hub unit bearing	

#### **Tightening torque:N·m (kgf·m, ft·lb)**

**T1: 65 (6.6, 47.9)**

**T2: 240 (24.5, 177)**

### C: CAUTION

- Wear appropriate work clothing, including a cap, protective goggles and protective shoes when performing any work.
- Remove contamination including dirt and corrosion before removal, installation or disassembly.
- Keep the disassembled parts in order and protect them from dust and dirt.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.

- Use SUBARU genuine grease etc. or equivalent. Do not mix grease etc. of different grades or manufacturers.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.
- Apply grease onto sliding or revolving surfaces before installation.
- Before installing snap rings, apply sufficient amount of grease to avoid damage and deformation.
- Before securing a part on a vise, place cushioning materials such as wood blocks, aluminum plates, or waste cloth between the part and the vise.






### D: PREPARATION TOOL

#### 1. SPECIAL TOOL

ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
	925091000	BAND TIGHTENING TOOL	Used for tightening the boot band. (A) Jig for the band (B) Ratchet wrench
	926470000	AXLE SHAFT PULLER	• Used for removing the axle shaft. • Used together with the AXLE SHAFT PULLER PLATE (28099PA110).
	18675AA000	DIFFERENTIAL SIDE OIL SEAL INSTALLER	Used for installing the differential side retainer oil seal.

## General Description

### DRIVE SHAFT SYSTEM

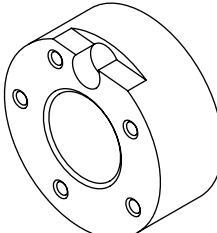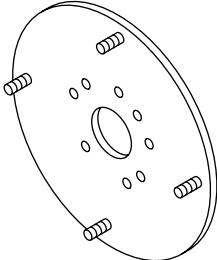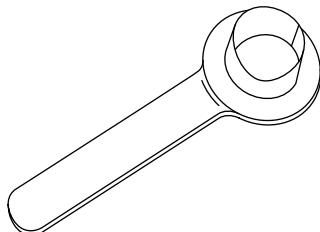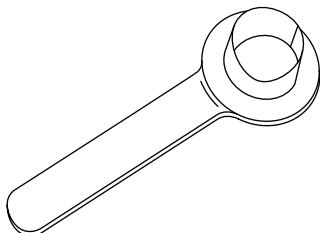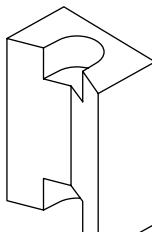ILLUSTRATION	TOOL NUMBER	DESCRIPTION	REMARKS
 ST-927080000	927080000	HUB STAND	Used for assembling hub bolt in hub.
 ST28099PA110	28099PA110	AXLE SHAFT PULLER PLATE	Exchange with the plate of the AXLE SHAFT PULLER (926470000) to use.
 ST28099PA090	28099PA090	OIL SEAL PROTECTOR	<ul style="list-style-type: none"> <li>Used for installing the rear drive shaft to the rear differential.</li> <li>For protecting the oil seal.</li> </ul>
 ST28399SA010	28399SA010	OIL SEAL PROTECTOR	<ul style="list-style-type: none"> <li>Used for installing front drive shaft into front differential.</li> <li>For protecting the oil seal.</li> </ul>
 ST28399AG000	28399AG000	HUB STAND	Used for extracting hub bolt.

# General Description

DRIVE SHAFT SYSTEM

## 2. GENERAL TOOL

DESCRIPTION	REMARKS
Puller	Used for removing the ball joint from knuckle arm.
Dial gauge	Used for inspecting the propeller shaft run-out.
Extension cap	Used for preventing leakage of gear oil or ATF.
Bar	Used for extracting drive shaft.