

General Description

PARKING BRAKE


1. General Description

A: SPECIFICATION

Type	Mechanical, drum in disc rear brakes	
Effective drum diameter	mm (in)	170 (6.69)
Lining dimensions (Length x Width x Thickness)	mm (in)	163.1 x 30.0 x 3.2 (6.421 x 1.181 x 0.126)
Clearance adjustment		Manual adjustment
Lever stroke	notches/N (kgf, lb)	5 — 6/200 (20.4, 45)


B: COMPONENT

1. PARKING BRAKE (REAR DISC BRAKE)

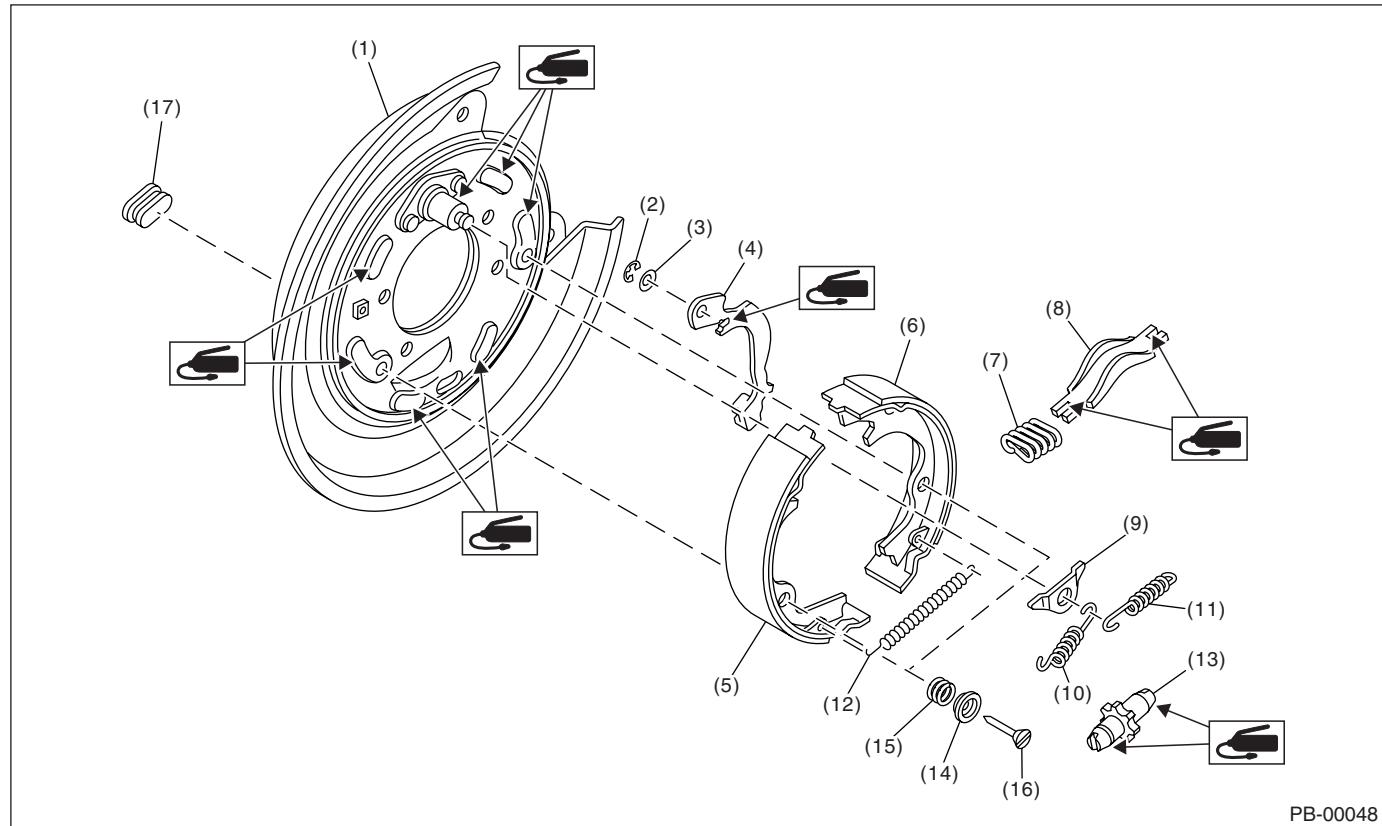

(1) Back plate	(7) Strut spring	(13) Adjuster
(2) Retainer	(8) Strut	(14) Shoe hold-down cup
(3) Spring washer	(9) Shoe guide plate	(15) Shoe hold-down spring
(4) Lever	(10) Primary return spring	(16) Shoe hold-down pin
(5) Parking brake shoe (Primary)	(11) Secondary return spring	
(6) Parking brake shoe (Secondary)	(12) Adjusting spring	
		(17) Adjusting hole cover

2. PARKING BRAKE CABLE

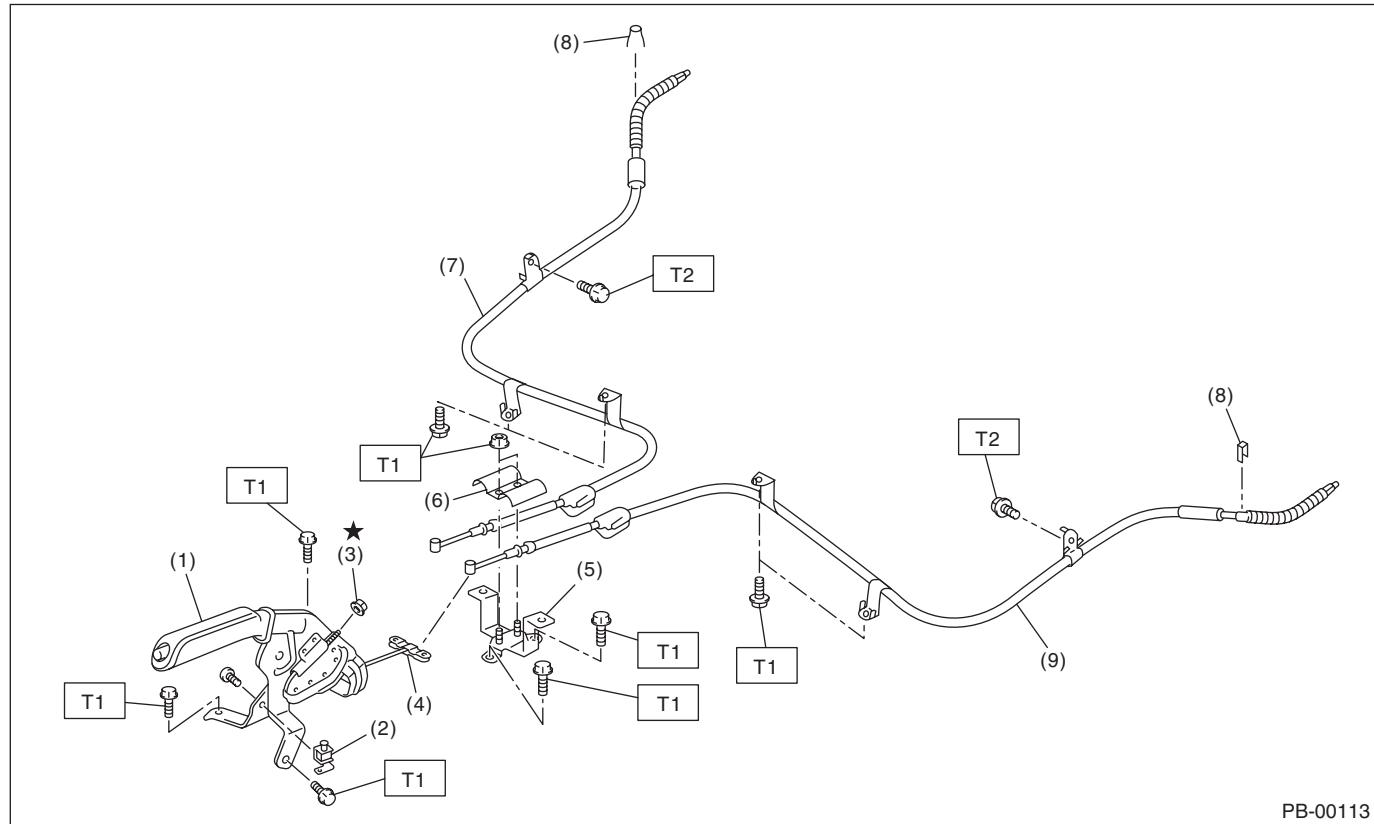

PB-00113

(1) Parking brake lever	(6) Clamp
(2) Parking brake switch	(7) Parking brake cable RH
(3) Adjusting nut (Self-locking nut)	(8) Clamp
(4) Equalizer	(9) Parking brake cable LH
(5) Bracket	

Tightening torque: N·m (kgf-m, ft-lb)**T1: 18 (1.8, 13.0)****T2: 33 (3.4, 24.3)****C: CAUTION**

- Wear appropriate work clothing, including a cap, protective goggles and protective shoes when performing any work.
- Before removal, installation or disassembly, be sure to clarify the failure. Avoid unnecessary removal, installation, disassembly and replacement.
- Vehicle components are extremely hot after driving. Be wary of receiving burns from heated parts.
- Use SUBARU genuine grease etc. or equivalent. Do not mix grease etc. of different grades or manufacturers.
- Be sure to tighten fasteners including bolts and nuts to the specified torque.
- Place shop jacks or rigid racks at the specified points.
- Before securing a part in a vise, place cushioning material such as wood blocks, aluminum plate or cloth between the part and the vise.
- Make sure grease does not come into contact with the parking shoes.