


## 7. Front Link

### A: REMOVAL


- 1) Lift up the vehicle, and then remove the rear wheels.
- 2) Support the rear arm horizontally using a transmission jack.

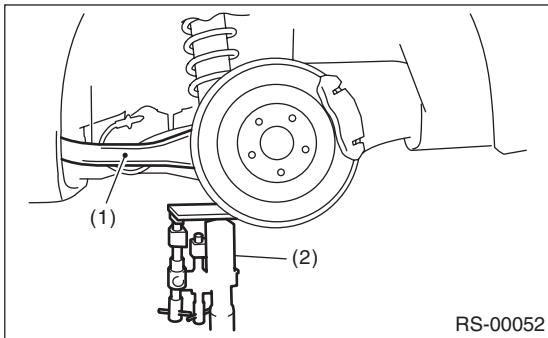

RS-00052


(1) Rear arm  
(2) Transmission jack

- 3) Remove the bolt which secures the front link to the sub frame.

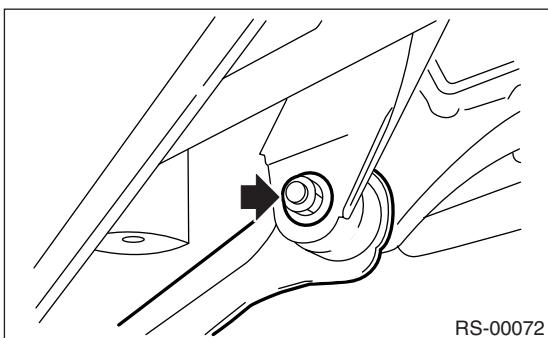

RS-00072


- 4) Remove the bolt which secures the front link to rear arm, then remove the front link.

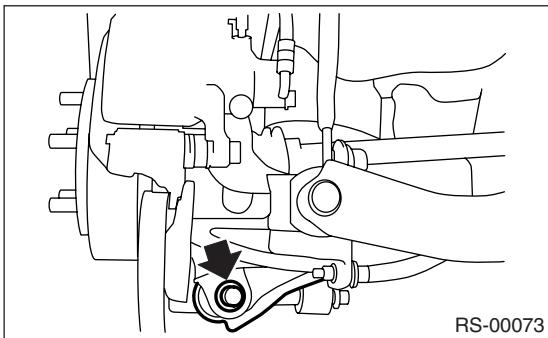

RS-00073

### B: INSTALLATION

- 1) Support the rear arm horizontally using a transmission jack.
- 2) Using new self-locking nuts, install the front link.

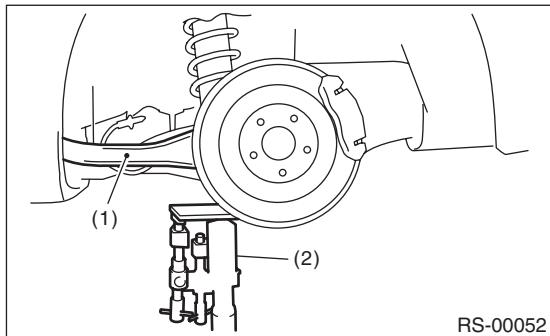


RS-00052

(1) Rear arm  
(2) Transmission jack

#### CAUTION:

**Install the front link with the protruding side facing the front side of the vehicle.**

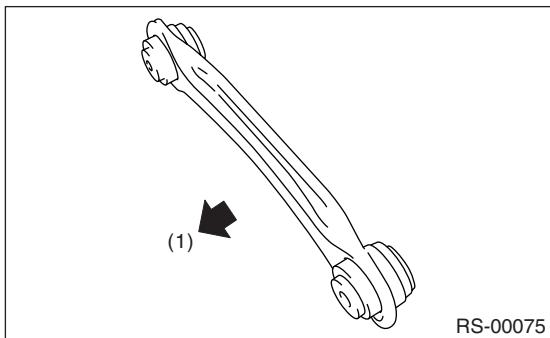

RS-00075

(1) Front

#### NOTE:

Inspect the wheel alignment and adjust if necessary.

#### Tightening torque:

**57 N·m (5.8 kgf·m, 42 ft-lb)**

### C: INSPECTION

Visually check the front link for damage and deformation.