


### 9. Sub Frame Support Arm

#### A: REMOVAL

- 1) Lift-up the vehicle and support the rear sub frame with a support stand.
- 2) Remove the sub frame support arm.

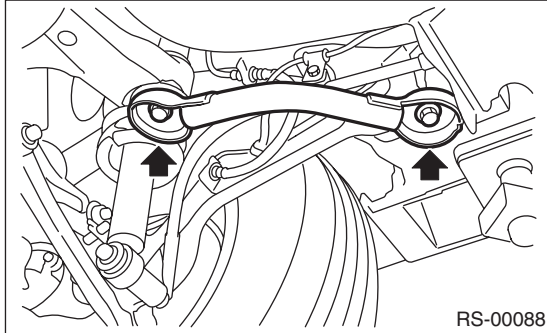

#### B: INSTALLATION

Install in the reverse order of removal.

##### *Tightening torque:*

*Sub frame support arm-to-Rear arm bracket*

*125 N·m (12.7 kgf-m, 92 ft-lb)*

*Sub frame support arm-to-Rear sub frame*

*175 N·m (17.8 kgf-m, 129 ft-lb)*

#### C: INSPECTION

Visually check the sub frame support arm for damage and deformation.