

## General Diagnostic Table

TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

### 12.General Diagnostic Table

#### A: INSPECTION

Symptoms		Problem parts
Tire pressure warning light illuminates.	Tire pressure is reduced.	<ul style="list-style-type: none"><li>• Improper tire pressure adjustment.</li><li>• Punctured tire</li></ul>
Tire pressure warning light blinks.	Tire pressure monitoring system has malfunction	<ul style="list-style-type: none"><li>• Air pressure sensor malfunction</li><li>• Air pressure sensor is out of battery.</li><li>• Tire pressure monitoring control module is faulty.</li><li>• Defective vehicle harness</li></ul>
Tire pressure is dropping but the warning light does not illuminate.	Tire pressure warning light does not illuminate	<ul style="list-style-type: none"><li>• Air pressure sensor is faulty.</li><li>• Tire pressure monitoring control module is faulty.</li><li>• Defective vehicle harness</li></ul>

## General Diagnostic Table

TIRE PRESSURE MONITORING SYSTEM (DIAGNOSTICS)

---

# DIFFERENTIALS

**DI**

---

	Page
1. General Description .....	2
2. Differential Gear Oil .....	27
3. Front Differential Assembly .....	29
4. Rear Differential (T-type) .....	30
5. Rear Differential (VA-type) .....	56
6. Rear Differential Front Oil Seal .....	84
7. Rear Differential Side Oil Seal .....	86
8. Rear Differential Front Member .....	87
9. General Diagnostic Table .....	88