

# List of Diagnostic Trouble Code (DTC)

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

## 11. List of Diagnostic Trouble Code (DTC)

### A: LIST

DTC	Detailed code	Display	Content of diagnosis	Reference target
C0021	07B0H	Front Right ABS Sensor Circuit Open or Shorted Battery	Open/high input of front ABS wheel speed sensor RH	<Ref. to VDC(diag)-39, DTC C0021 FRONT RIGHT ABS SENSOR CIRCUIT OPEN OR SHORT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0022	072FH 0736H 0737H 0738H 073AH 073CH	Front Right ABS Sensor Signal	Front ABS wheel speed sensor RH signal malfunction	<Ref. to VDC(diag)-42, DTC C0022 FRONT RIGHT ABS SENSOR SIGNAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0023	06B0H	Front Left ABS Sensor Circuit Open or Shorted Battery	Open/high input of front ABS wheel speed sensor LH	<Ref. to VDC(diag)-39, DTC C0023 FRONT LEFT ABS SENSOR CIRCUIT OPEN OR SHORT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0024	062FH 0636H 0637H 0638H 063AH 063CH	Front Left ABS Sensor Signal	Front ABS wheel speed sensor LH signal malfunction	<Ref. to VDC(diag)-42, DTC C0024 FRONT LEFT ABS SENSOR SIGNAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0025	09B0H	Rear Right ABS Sensor Circuit Open or Shorted Battery	Open/high input of rear ABS wheel speed sensor RH	<Ref. to VDC(diag)-39, DTC C0025 REAR RIGHT ABS SENSOR CIRCUIT OPEN OR SHORT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0026	092FH 0936H 0937H 0938H 093AH 093CH	Rear Right ABS Sensor Signal	Rear ABS wheel speed sensor RH signal malfunction	<Ref. to VDC(diag)-42, DTC C0026 REAR RIGHT ABS SENSOR SIGNAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0027	08B0H	Rear Left ABS Sensor Circuit Open or Shorted Battery	Open/high input of rear ABS wheel speed sensor LH	<Ref. to VDC(diag)-40, DTC C0027 REAR LEFT ABS SENSOR CIRCUIT OPEN OR SHORT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0028	082FH 0836H 0837H 0838H 083AH 083CH	Rear Left ABS Sensor Signal	Rear ABS wheel speed sensor LH signal malfunction	<Ref. to VDC(diag)-43, DTC C0028 REAR LEFT ABS SENSOR SIGNAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0029	0A11H 0A21H 0A42H 0A46H 0A50H	Any One of Four ABS Sensors Signal	ABS wheel speed sensor signal malfunction in one of four wheels	<Ref. to VDC(diag)-46, DTC C0029 ANY OF WHEEL SENSORS SIGNAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0031	0DB8H 0DC0H	FR hold valve malfunction	Front inlet solenoid valve RH malfunction in VDCCM&H/U	<Ref. to VDC(diag)-48, DTC C0031 FR HOLD VALVE MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0032	0EB8H 0EC0H	FR pressure reducing valve malfunction	Front outlet solenoid valve RH malfunction in VDCCM&H/U	<Ref. to VDC(diag)-48, DTC C0032 FR PRESSURE REDUCING VALVE MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

# List of Diagnostic Trouble Code (DTC)

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

DTC	Detailed code	Display	Content of diagnosis	Reference target
C0033	0BB8H 0BC0H	FL hold valve malfunction	Front inlet solenoid valve LH malfunction in VDCCM&H/U	<Ref. to VDC(diag)-48, DTC C0033 FL HOLD VALVE MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0034	0CB8H 0CC0H	FL pressure reducing valve malfunction	Front outlet solenoid valve LH malfunction in VDCCM&H/U	<Ref. to VDC(diag)-48, DTC C0034 FL PRESSURE REDUCING VALVE MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0035	11B8H 11C0H	RR hold valve malfunction	Rear inlet solenoid valve RH malfunction in VDCCM&H/U	<Ref. to VDC(diag)-48, DTC C0035 RR HOLD VALVE MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0036	12B8H 12C0H	RR pressure reducing valve malfunction	Rear outlet solenoid valve RH malfunction in VDCCM&H/U	<Ref. to VDC(diag)-48, DTC C0036 RR PRESSURE REDUCING VALVE MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0037	0FB8H 0FC0H	RL hold valve malfunction	Rear inlet solenoid valve LH malfunction in VDCCM&H/U	<Ref. to VDC(diag)-49, DTC C0037 RL HOLD VALVE MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0038	10B8H 10C0H	RL pressure reducing valve malfunction	Rear outlet solenoid valve LH malfunction in VDCCM&H/U	<Ref. to VDC(diag)-49, DTC C0038 RL PRESSURE REDUCING VALVE MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0039	0FB5H 11B5H 1AB5H	Any one of four solenoid valves	Solenoid valve malfunction in one of four wheels	<Ref. to VDC(diag)-49, DTC C0039 ANY ONE OF FOUR SOLENOID VALVES, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0041	—	ECM	VDC control module malfunction	<Ref. to VDC(diag)-52, DTC C0041 ECM, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	1620H 1630H 16C0H	Parameter selection error	VDC control module parameter selection failure	<Ref. to VDC(diag)-54, DTC C0041 PARAMETER SELECTION ERROR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0042	0316H 031CH 0322H 0324H	Power Supply Voltage Failure	Power voltage malfunction	<Ref. to VDC(diag)-55, DTC C0042 POWER SUPPLY VOLTAGE FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0044	2921H	TCM communication circuit	CAN communication failure of transmission control module	<Ref. to VDC(diag)-57, DTC C0044 TCM COMMUNICATION CIRCUIT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0045	2922H 2932H	Incorrect VDC Control Module specifications	Different VDC control module specification	<Ref. to VDC(diag)-58, DTC C0045 INCORRECT VDC CONTROL MODULE SPECIFICATIONS, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	2923H	TCM malfunction	AT control module malfunction	<Ref. to VDC(diag)-59, DTC C0045 TCM MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

## List of Diagnostic Trouble Code (DTC)

### VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

DTC	Detailed code	Display	Content of diagnosis	Reference target
C0047	150EH 1512H 1513H 1514H 1518H 1519H 151AH 151BH 151DH 151EH 151FH 1520H 1531H 1540H 15C0H	Improper CAN Communication	Improper CAN communication	<Ref. to VDC(diag)-60, DTC C0047 CAN COMMUNICATION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0051	021FH 0220H 0221H 0280H 0281H 02B0H 02B1H 02C0H	Valve Relay	Valve Relay	<Ref. to VDC(diag)-62, DTC C0051 VALVE RELAY, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0052	0580H	Motor and Motor Relay	Motor/motor relay OFF malfunction	<Ref. to VDC(diag)-64, DTC C0052 MOTOR AND MOTOR RELAY OFF FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	05A0H	Motor and motor relay ON failure	Motor/motor relay ON malfunction	<Ref. to VDC(diag)-66, DTC C0052 MOTOR AND MOTOR RELAY ON FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	0560H	Motor malfunction	Motor	<Ref. to VDC(diag)-67, DTC C0052 MOTOR MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0054	04B0H	Brake Light Switch	BLS open circuit	<Ref. to VDC(diag)-68, DTC C0054 BLS CIRCUIT OPEN, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	043CH	BLS ON Malfunction	BLS ON malfunction	<Ref. to VDC(diag)-70, DTC C0054 BLS ON MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	04C1H	BLS OFF Malfunction	BLS OFF malfunction	<Ref. to VDC(diag)-72, DTC C0054 BLS OFF MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0057	2931H	ECM communication circuit	CAN communication failure of engine control module	<Ref. to VDC(diag)-73, DTC C0057 ECM COMMUNICATION CIRCUIT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	2933H	ECM control system	Coordinate control prohibition of engine control module	<Ref. to VDC(diag)-74, DTC C0057 ECM CONTROL SYSTEM, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0061	19B8H 19C0H	VDC switching valve 1 (S)	Secondary cut valve malfunction in VDCCM&H/U	<Ref. to VDC(diag)-49, DTC C0061 NORMAL OPENING VALVE 1 MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0062	1AB8H 1AC0H	VDC switching valve 1 (P)	Primary cut valve malfunction in VDCCM&H/U	<Ref. to VDC(diag)-49, DTC C0062 NORMAL OPENING VALVE 2 MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0063	1BB8H 1BC0H	VDC switching valve 2 (S)	Secondary suction valve malfunction in VDCCM&H/U	<Ref. to VDC(diag)-49, DTC C0063 NORMAL CLOSING VALVE 1 MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

# List of Diagnostic Trouble Code (DTC)

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

DTC	Detailed code	Display	Content of diagnosis	Reference target
C0064	1CB8H 1CC0H	VDC switching valve 2 (P)	Primary suction valve malfunction in VDCCM&H/U	<Ref. to VDC(diag)-50, DTC C0064 NORMAL CLOSING VALVE 2 MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0071	2130H	Steering angle sensor offset is too big	Excessive steering angle sensor output offset	<Ref. to VDC(diag)-75, DTC C0071 STEERING ANGLE SENSOR OFFSET IS TOO BIG, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	2134H	Change range of steering angle sensor is too big	Excessive variation amount of steering angle sensor output	<Ref. to VDC(diag)-77, DTC C0071 CHANGE RANGE OF STEERING ANGLE SENSOR IS TOO BIG, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	212EH 2132H 2136H 2138H 213CH 2150H 2151H 2152H 2153H 2154H 2155H 2156H 2157H 2158H 2159H 215AH	Steering angle sensor malfunction	Steering angle sensor output	<Ref. to VDC(diag)-79, DTC C0071 STEERING ANGLE SENSOR MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	2104H	Steering angle sensor power supply malfunction	Steering angle sensor power supply malfunction	<Ref. to VDC(diag)-81, DTC C0071 STEERING ANGLE SENSOR MALFUNCTION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0072	1E03H 1E1AH 1E1EH 1E22H 1E26H 1E28H 1E2CH 1E34H 1E38H 1E3AH 1E3CH 1E3FH 1EACH	Abnormal yaw rate sensor output	Yaw rate sensor output	<Ref. to VDC(diag)-83, DTC C0072 ABNORMAL YAW RATE SENSOR OUTPUT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	1E04H 1E05H 1E07H	Yaw rate sensor power/ output	Yaw rate sensor power supply/output	<Ref. to VDC(diag)-85, DTC C0072 VOLTAGE INPUTTED TO YAW RATE SENSOR EXCEEDS SPECIFICATION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	1EAAH	Abnormal yaw rate sensor reference voltage	Yaw rate sensor reference	<Ref. to VDC(diag)-87, DTC C0072 ABNORMAL YAW RATE SENSOR REFERENCE VOLTAGE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	1E30H	Change range of yaw rate sensor signal is too big	Excessive variation amount of yaw rate sensor output	<Ref. to VDC(diag)-89, DTC C0072 CHANGE RANGE OF YAW RATE SENSOR SIGNAL IS TOO BIG, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	1E06H 1EABH 1EAEH	Yaw rate sensor communication	Yaw rate sensor communication	<Ref. to VDC(diag)-91, DTC C0072 YAW RATE SENSOR COMMUNICATION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>

## List of Diagnostic Trouble Code (DTC)

### VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

DTC	Detailed code	Display	Content of diagnosis	Reference target
C0073	1D46H 1D47H	Lateral G sensor offset is too big	Excessive amount of lateral G sensor output offset	<Ref. to VDC(diag)-92, DTC C0073 LATERAL G SENSOR OFFSET IS TOO BIG, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	1D44H 1D45H 1DA0H 1DA2H	Abnormal lateral G sensor output	Lateral G sensor output	<Ref. to VDC(diag)-92, DTC C0073 ABNORMAL LATERAL G SENSOR OUTPUT, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	1D49H	Excessive lateral G sensor signal	Excessive lateral G sensor output	<Ref. to VDC(diag)-93, DTC C0073 EXCESSIVE LATERAL G SENSOR SIGNAL, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
	1DA4H	Lateral G sensor communication	Lateral G sensor communication	<Ref. to VDC(diag)-90, DTC C0073 LATERAL G SENSOR COMMUNICATION, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0074	1F4EH 1F90H 1FA1H 1FB0H 1FB1H 1FC0H	Pressure sensor	Pressure sensor	<Ref. to VDC(diag)-95, DTC C0074 PRESSURE SENSOR, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>
C0081	2201H 2202H	System malfunction	System malfunction	<Ref. to VDC(diag)-96, DTC C0081 SYSTEM FAILURE, Diagnostic Procedure with Diagnostic Trouble Code (DTC).>